


NUX Drum System

DIGITAL DRUM KIT

DM-210

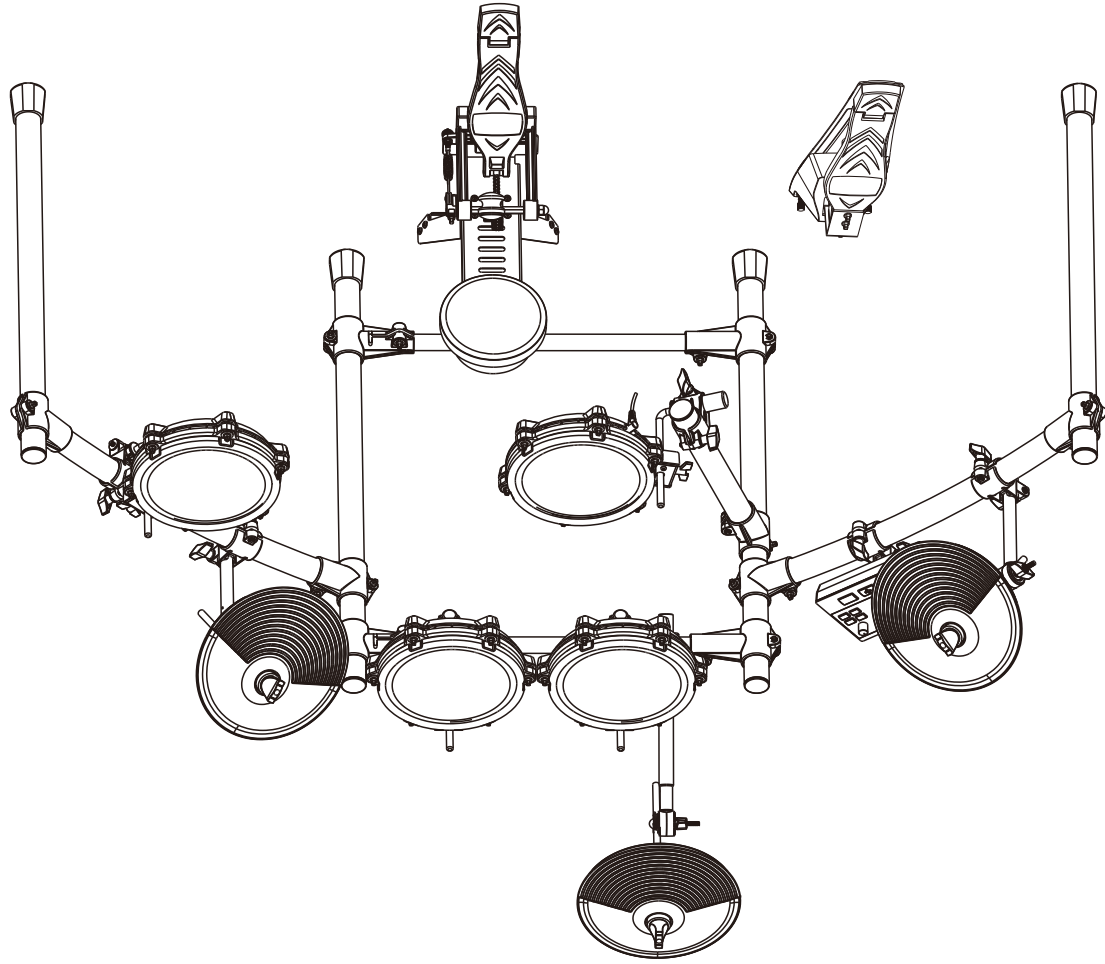

Cherub Technology Co., Ltd
www.nuxefx.com

NUX

© 2020 Cherub Technology-All rights reserved.


No part of this publication may be reproduced in any form without prior written permission of Cherub Technology.

使用说明书

NUX 电子鼓系统

DIGITAL DRUM KIT

DM-210 电子鼓

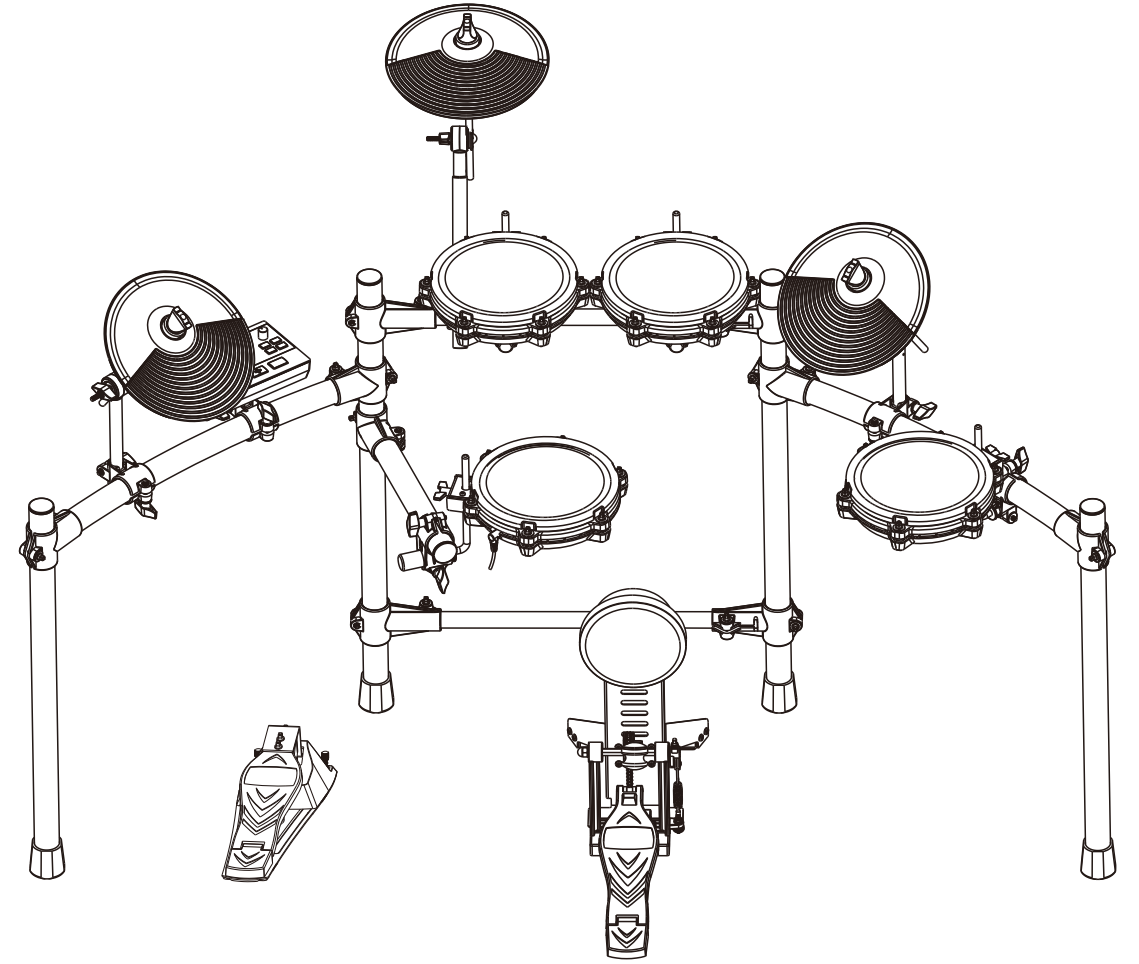

NUX

深圳市蔚科电子科技开发有限公司

www.nuxefx.com

安全使用本设备

为避免火灾、电击以及人身伤害，请遵循以下指示

- 将本设备的电源插口与带有接地保护的电源插座连接。
 - 请勿自行拆开或改动本设备的任何内置部件。
 - 请勿尝试修理或更换本设备零件（除非本说明书提供有安装选购配备的指示）请就近洽询NUX服务中心或NUX授权经销商。
 - 请勿将本设备放置在以下场所：
 - 温度过高的场所（例如阳光直射下的封闭车辆中、热输送管附近或发热机器的上方）
 - 潮湿处（例如：浴室、洗手间、或潮湿的地面）
 - 湿气重的地方
 - 直接遭雨淋的地方
 - 灰尘多的地方
 - 有强烈震动的地方
 - 请确保将本设备放置于平坦之处以确保其稳固。请勿将本设备放置于可能会摇晃的支架上或是倾斜之处。
-
- 当发生以下情况时，请立即关闭电源，将插头拔掉，并与当地NUX服务中心或NUX授权经销商联系：
 - AC适配器、电源线或是插头破损
 - 发生冒烟或发出异味
 - 异物或液体掉入或渗入本设备
 - 本设备直接遭雨淋（或打湿）
 - 本设备操作不正常或是表现有明显的变化
 - 请注意家中的孩童。成人应监督孩童行为，直到他有能力遵循必要的安全指示操作本设备。
- 本设备必须连接操作说明中指示的和设备背面注明的供电装置。
 - 请使用本设备附属的电源导线。附属的电源导线请勿用于其他的设备。
 - 电源线请勿过度扭曲或弯折，也不可以在上面放置重物。这样可能会损坏电源线而造成元件断裂与短路。损坏的电线可能造成火灾和触电的危险！
 - 无论单独使用本产品或连接使用放大器、音箱或耳机时，过大的音量可能会导致听力永久的损害。请勿长期在过大音量或任何会导致不适的音量下使用。如果您感到任何听力的损失或产生耳鸣，请停止使用并迅速求诊。
 - 请勿将任何物品（如易燃物、硬币、别针等）或任何液体（水、饮料等）掉入或渗入设备中。


- 在国外使用本设备之前，请与当地NUX服务中心或授权经销商联系。
- 请勿将盛有水的容器（如花瓶）或饮料放置于设备上。盛有杀虫剂、香水、酒精、指甲油或喷雾剂的容器也不要放置在设备上。请使用柔软的干布擦拭溅到设备上的液体。
- 请将本设备和AC适配器放置在不影响其良好通风的场所或方向。
- 将AC适配器的插头插入或拔开插座时，请用手拿设备电源线的插头部分。
- 每隔一段时间，您必须将AC适配器的电源插头拔掉，并用干布擦拭和清除累积于插头的灰尘。当长期不使用本设备时，也请将电源插头拔离插座。在电源插头与电源插座之间沉积的灰尘可能会使绝缘不良而导致火灾。
- 请避免电源线与各种导线互相缠绕。此外，也请让孩童远离电源线与导线。请勿踩踏在设备上，也不要将重物放置在设备上。
- 手部潮湿时，请勿拿取设备的电源线或将AC适配器的插头插入或拔离插座。
- 移动设备之前，请拔下AC适配器连接线和所有与设备连接的外置设备连线。
- 清洁本设备之前，请关闭电源并从插座上拔下AC适配器连接线。
- 若怀疑您的地区可能发生雷击时，请将电源插头拔掉。
- 请把螺丝放置于孩童触及不到的安全之处，以防孩童误吞食。

目录


组装示意图.....	04
各部件名称.....	07
音源控制面板.....	08
连接音频设备.....	09
显示屏幕.....	10
准备演奏.....	11
功能操作.....	14
套鼓整体切换.....	14
套鼓鼓盘设置.....	14
混响功能操作.....	16
DEMO曲功能操作.....	16
节拍器功能操作.....	16
录音模式操作.....	16
教练功能操作.....	17
系统功能设置.....	19
MIDI执行列表.....	20
鼓组名称.....	20
技术规格.....	21

组装示意图


各部件组装

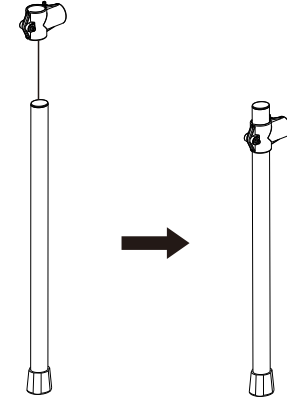


鼓架前支架 (2PCS)

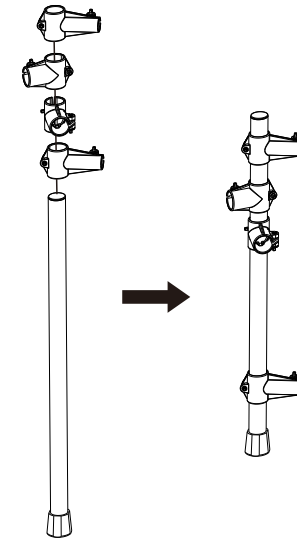


鼓架后支架 (左)

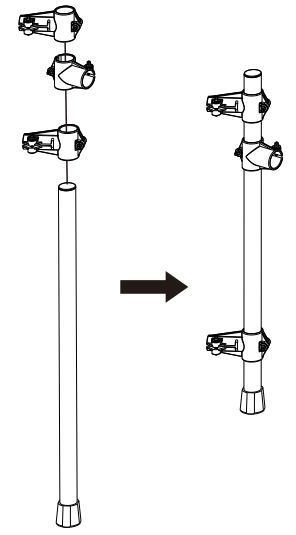


鼓架后支架 (右)

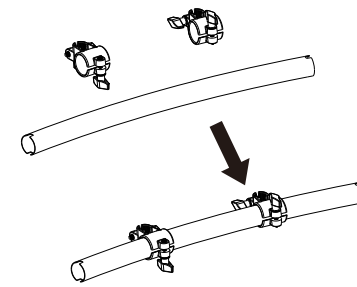


鼓架侧臂 (2PCS)

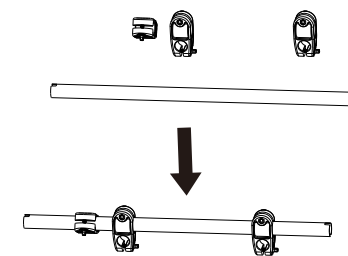


鼓架上横梁(1PCS)

 

鼓架下横梁(1PCS)

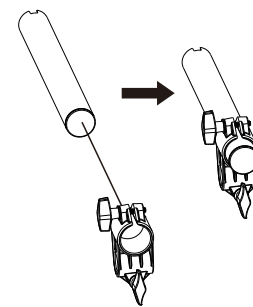


军鼓支撑架(1PCS)

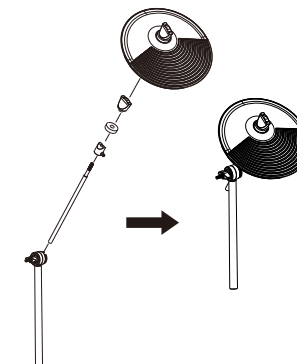


镲片(2PCS)


总装示意图

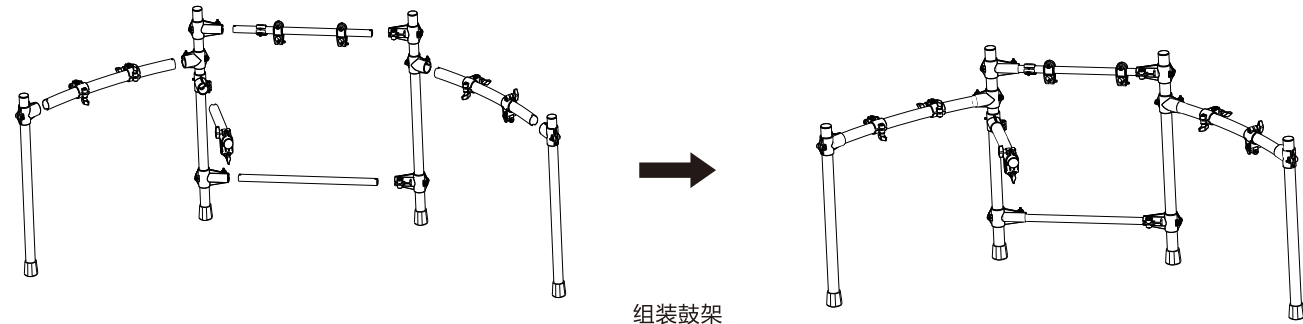


组装鼓架

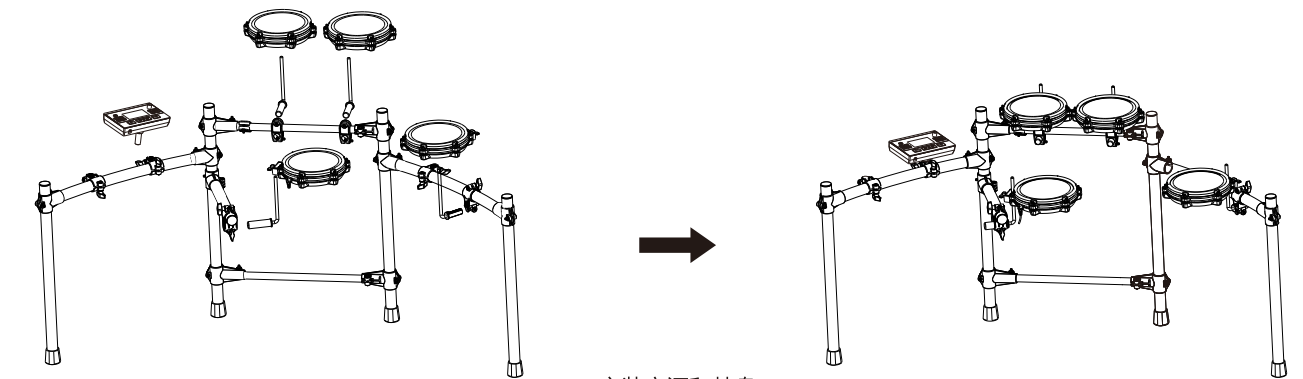

安装音源和鼓盘

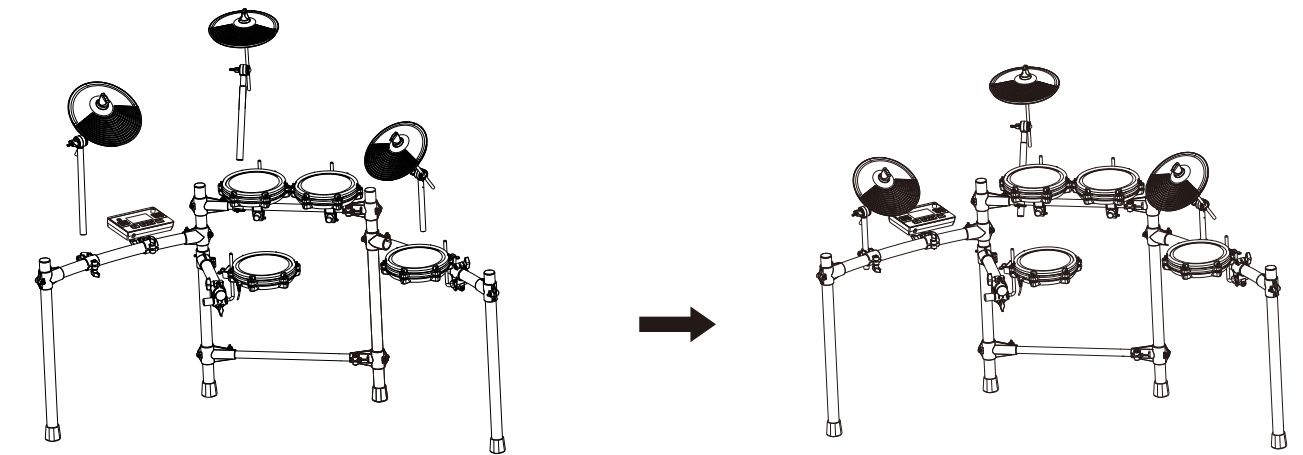


安装镲片

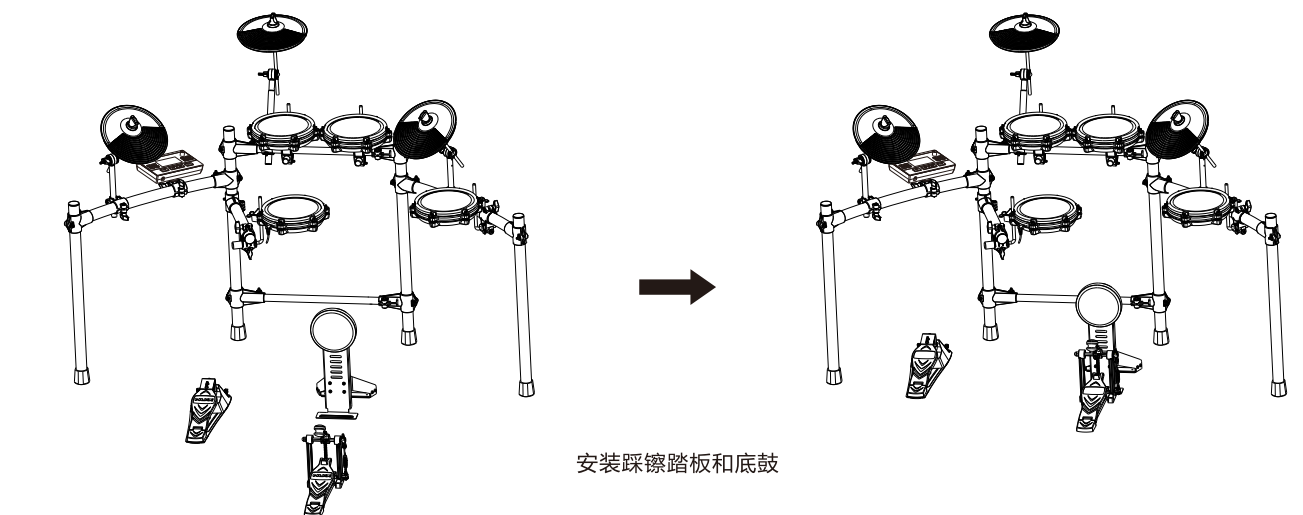


安装踩镲踏板和底鼓

连接数据线

1. 连接数据线到音源系统。

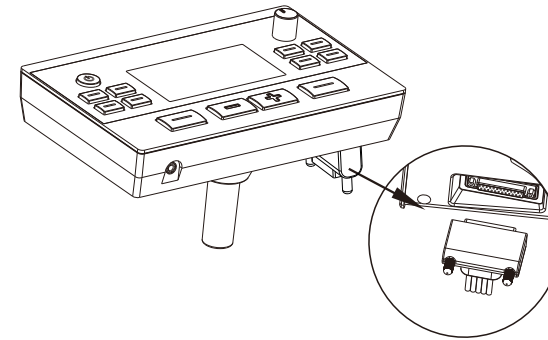

3. 连接踩镲踏板和底鼓踏板。

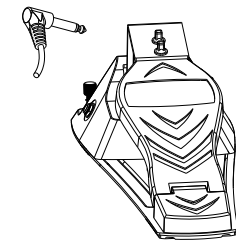


连接踏板


2. 连接鼓盘和镲片。

连接线上的标签指示所连接的打击垫或踏板的名称。


如下图所示：

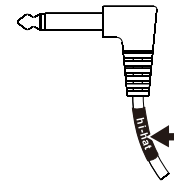

连接鼓盘：

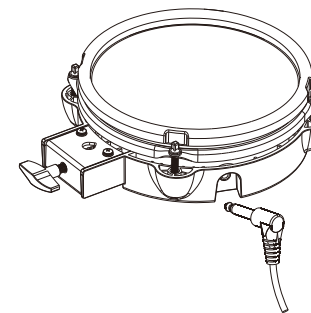


连接镲片：

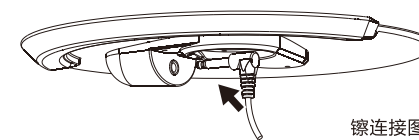


镲连接图


注意：为了防止设备故障或损坏，在连接设备时，请调低音量并把设备电源关闭。

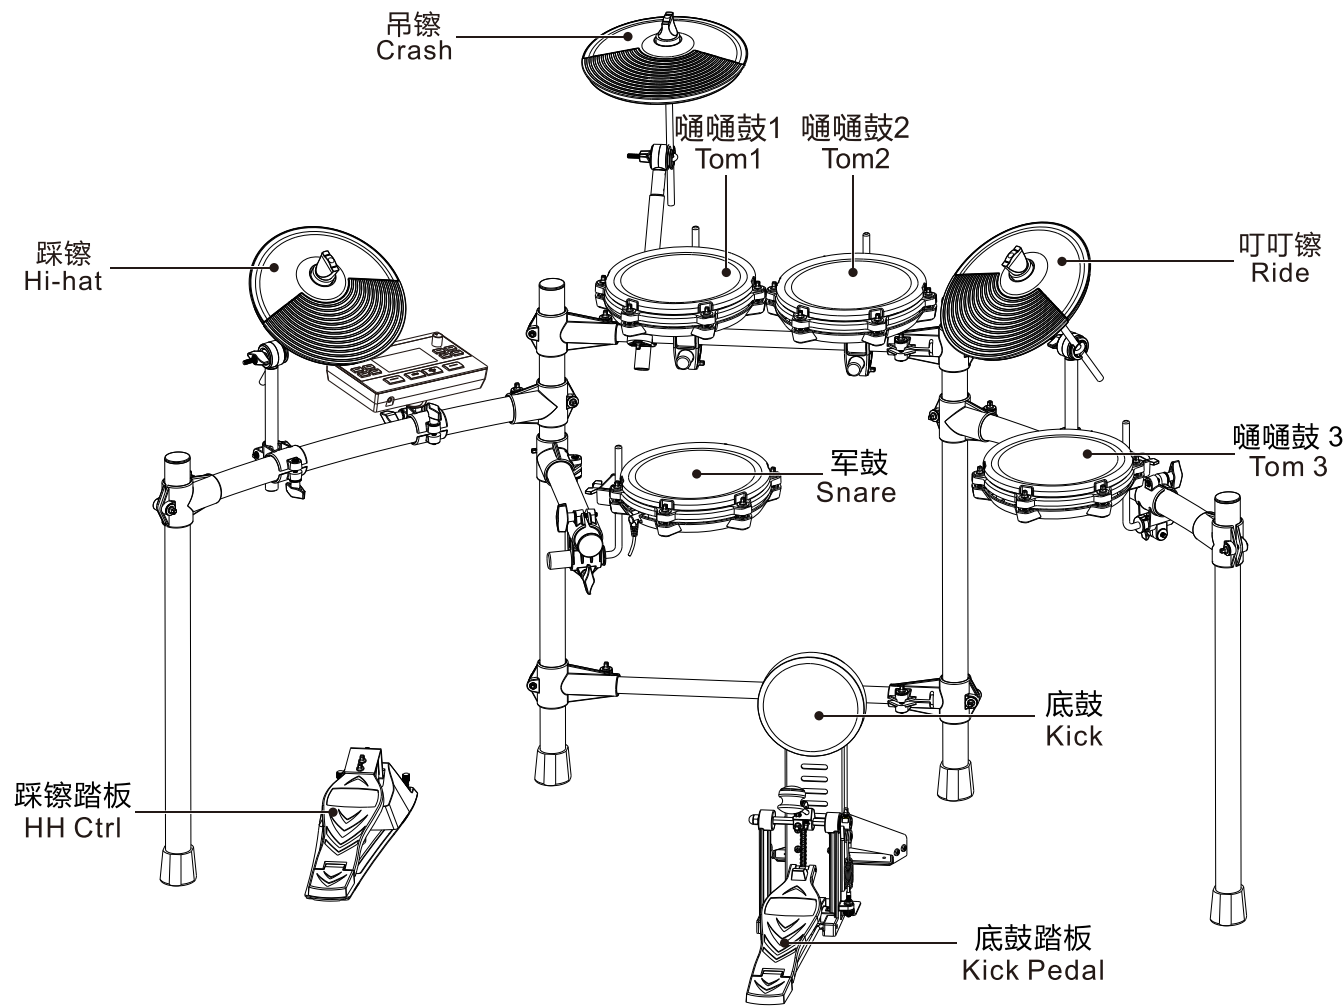

- | | |
|---------------|------------------|
| 1. 显示屏幕 | 9. 音量调节旋钮 |
| 2. DM-210开关按键 | 10. 录音按键 |
| 3. 节拍器开/关按键 | 11. 播放与暂停按键 |
| 4. 鼓组选择按键 | 12. 开启/关闭DEMO曲鼓声 |
| 5. 混响功能开/关按键 | 13. DEMO曲界面按键 |
| 6. 教练功能开/关按键 | 14. 参数选择与调节按键 |
| 7. 参数选择与调节按键 | 15. 确认按键 |
| 8. 菜单按键 | 16. 耳机接口 |

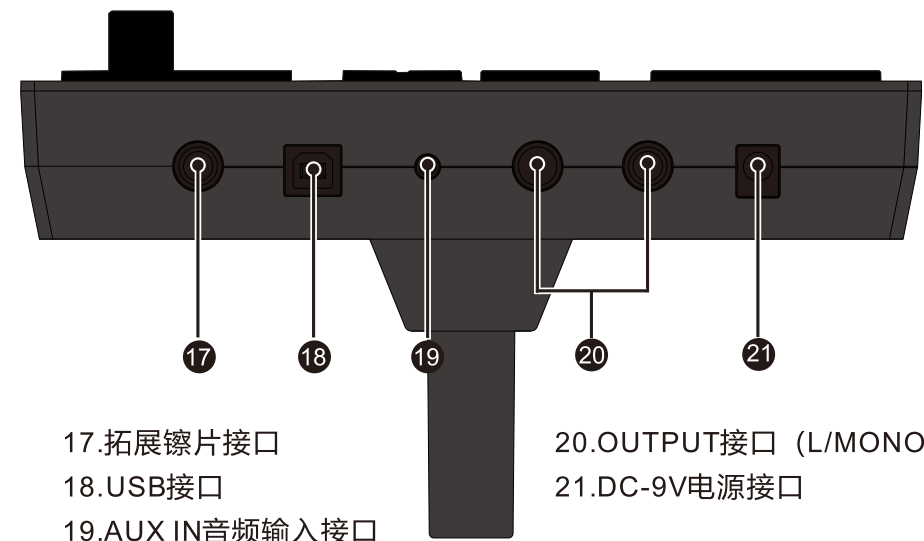


- | | |
|------------------|---------------------------|
| 17. 拓展镲片接口 | 20. OUTPUT接口 (L/MONO 和 R) |
| 18. USB接口 | 21. DC-9V电源接口 |
| 19. AUX IN音频输入接口 | |

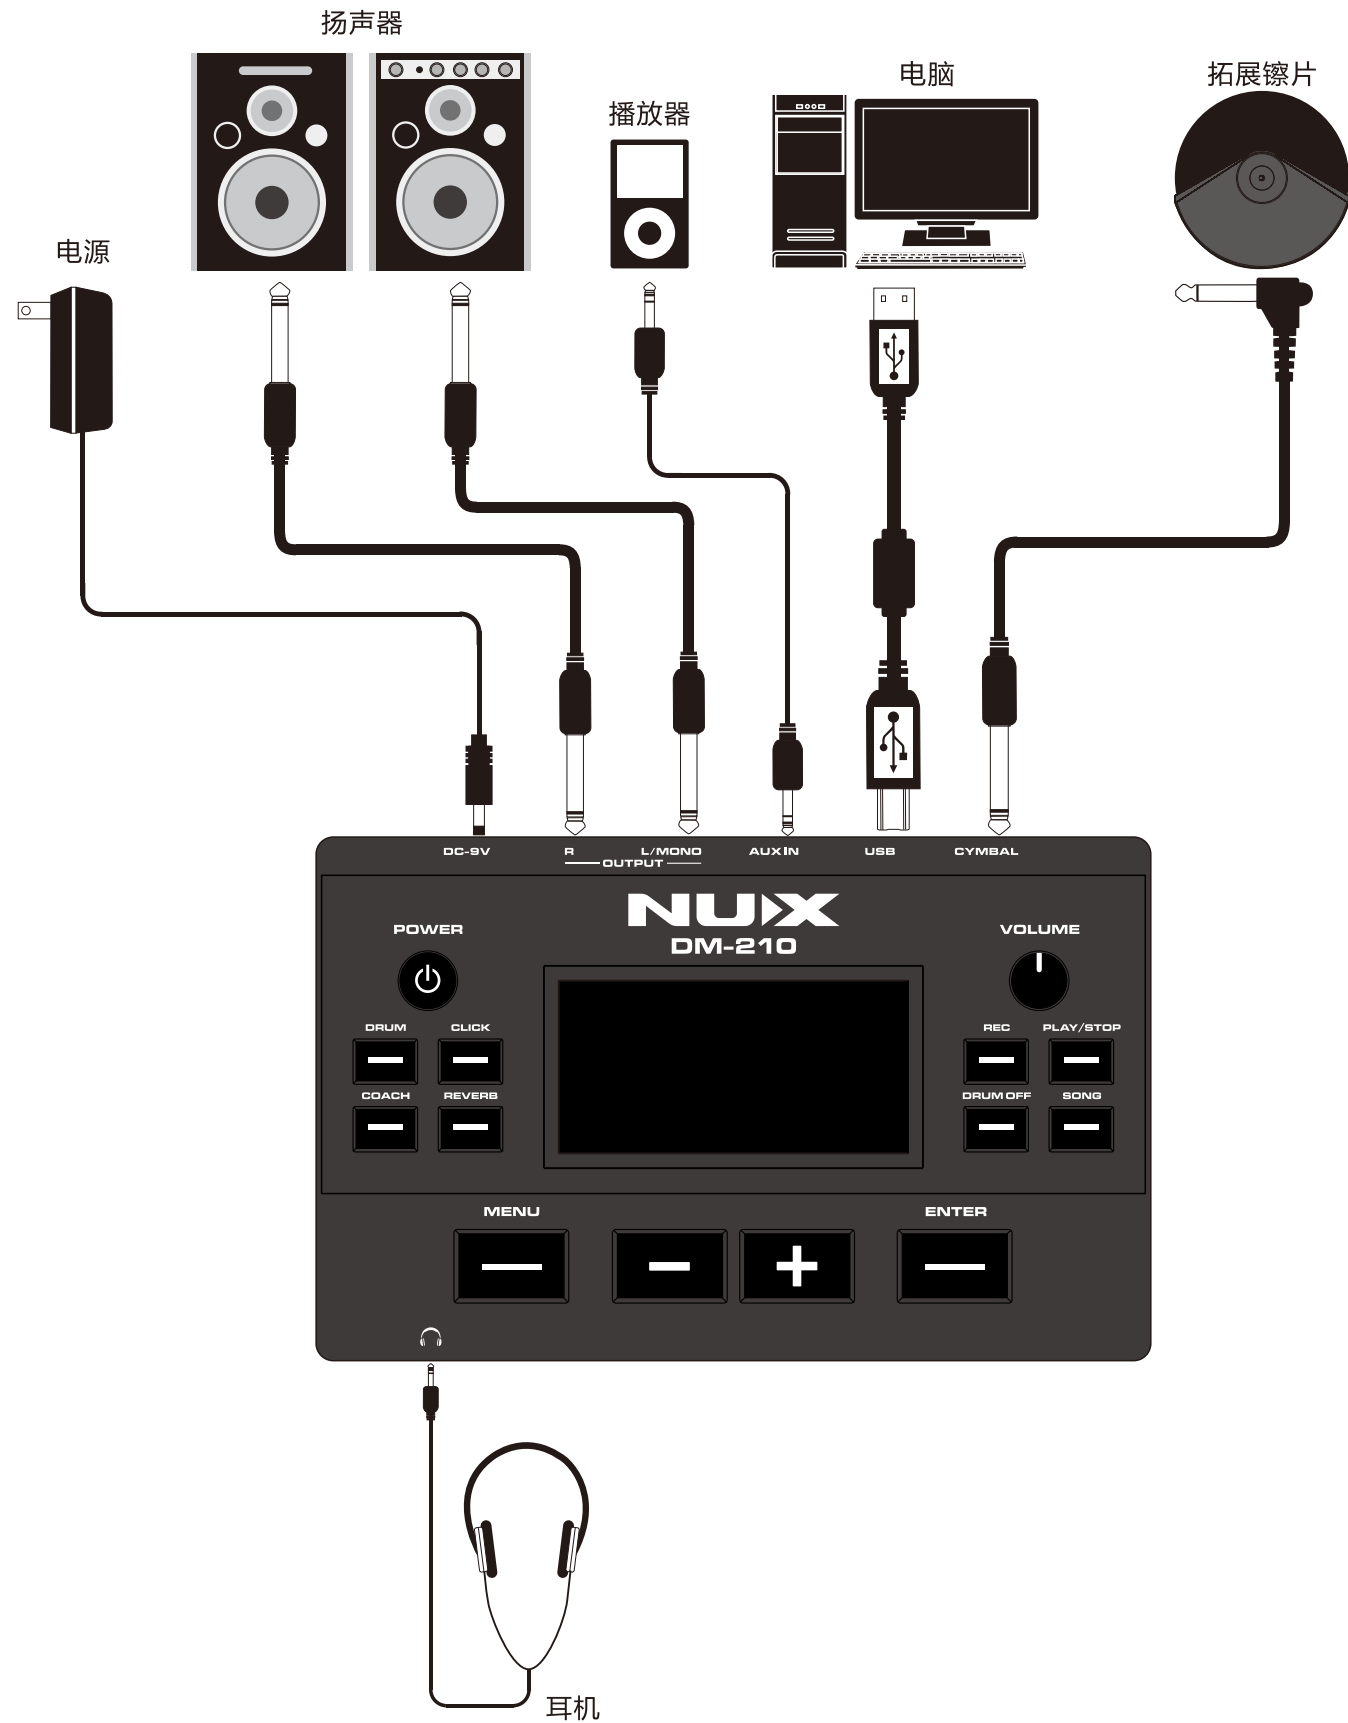

注意：

为了防止设备故障或损坏，在开机或进行其它设备连接前，请调低音量并把设备电源关闭。

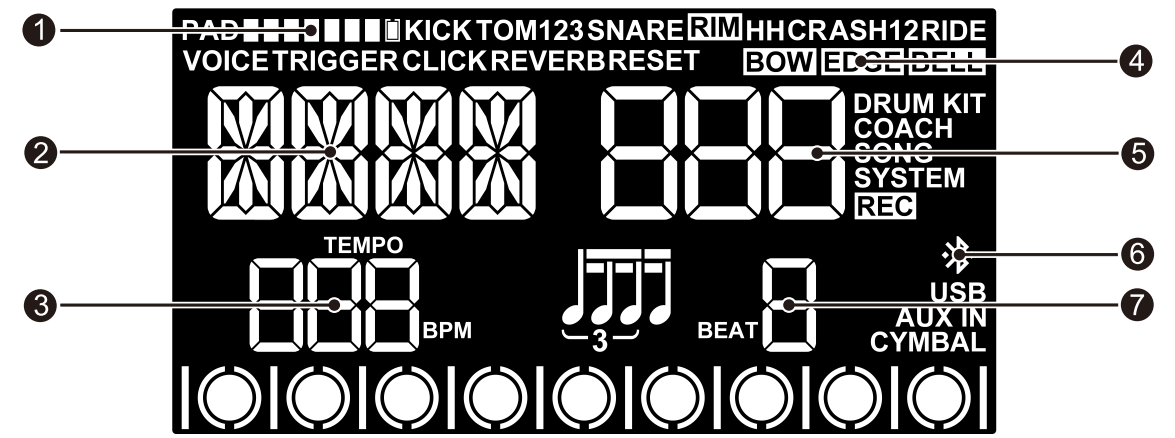

- 1. 力度显示
- 2. 参数名称显示
- 3. 节拍器速度显示
- 4. 部件显示


- 5. 参数值显示
- 6. 蓝牙显示
- 7. 节拍显示

*开启电源

1. 将VOLUME旋钮调节至最小。
2. 将外扩设备音量调节至最小。
3. 打开电源。



注：打开电源时，可能会听到微弱的声响，这是正常现象，并非故障。

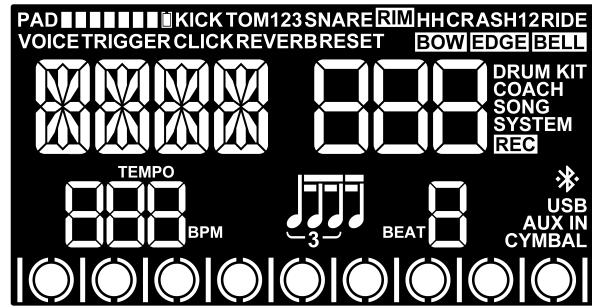

4. 敲击鼓盘、镲片，调节音量。
按照你的需要提高外扩设备的音量。


*关闭电源

1. 将DM-210外扩设备的音量调节至最小。
2. 关闭外扩设备的电源。
3. 关闭DM-210电源。




*军鼓 (Snare)

面击
打击鼓面

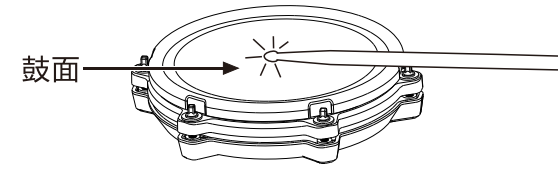


边击
打击鼓边

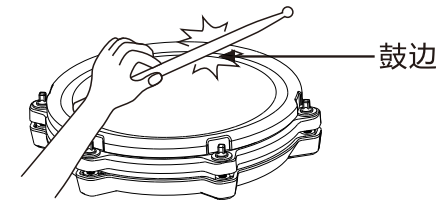


*嗵鼓 (Tom)

面击
打击鼓面

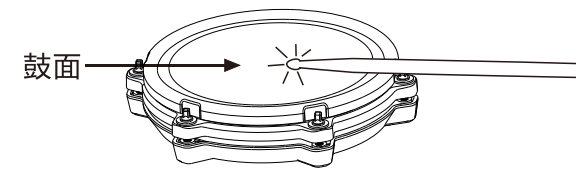


边击
打击鼓边

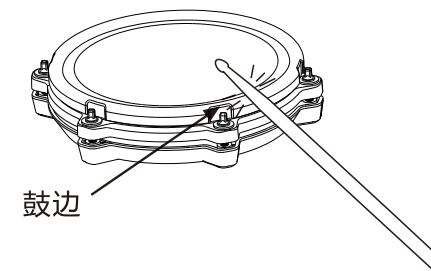


*底鼓 (Kick)

打击 踩下底鼓踏板

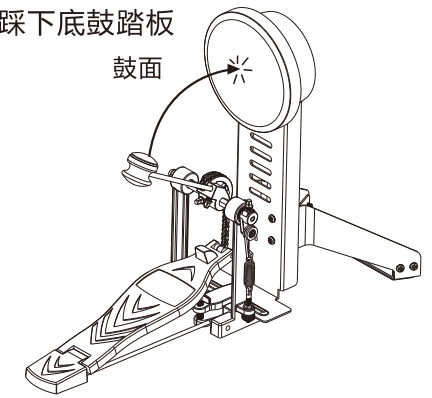


*镲片 (Crash Ride)

面击
打击镲片的面

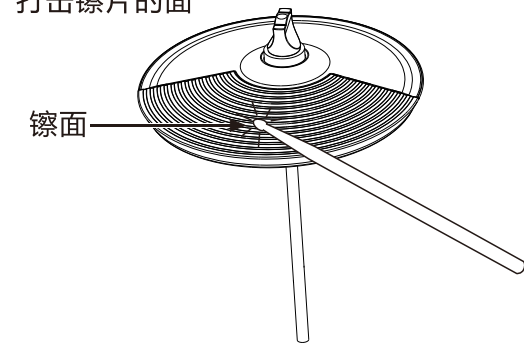


边击
打击镲片的边缘

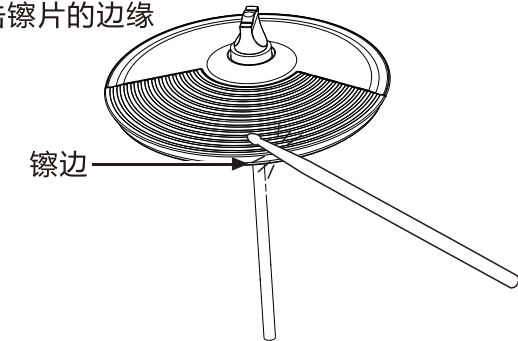

镲片静音

打击镲片后，立即用手捏住镲片的边缘将会进行静音。如图所示捏住边缘触发器的位置。如果您捏住其它无触发器的位置，镲片将不会静音。

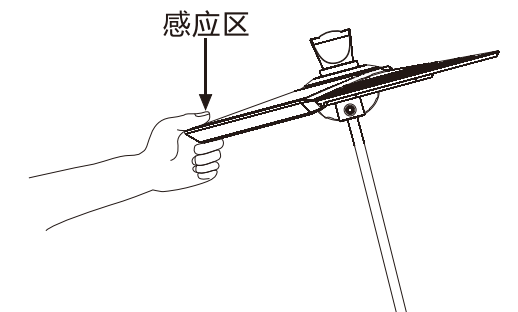


* 踩镲 (Hi-hat)

开放/闭合

踩镲音色将在开放和闭合之间改变，这将取决于踩镲踏板和踩镲镲片的力度控制。


面击

打击镲片的面

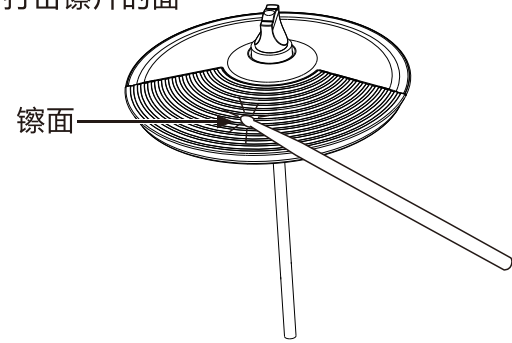


镲片静音

打击镲片后，立即用手捏住镲片的边缘将会进行静音。如图所示捏住边缘触发器的位置。如果您捏住其它无触发器的位置，镲片将不会静音。

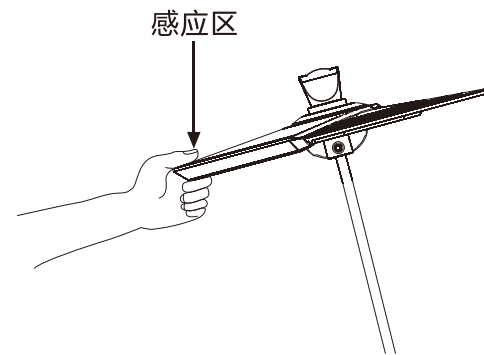

* 踩镲控制踏板 (HH Ctrl)

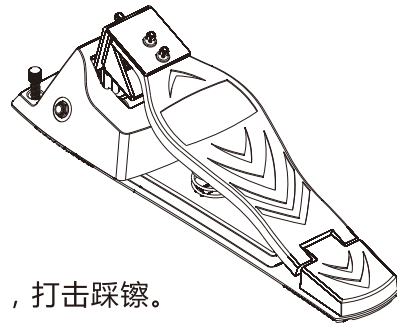

开放踩镲

不踏下踏板，打击踩镲。



闭合踩镲

踏下踏板，打击踩镲。


套鼓整体切换

* 开机即进入Drumkit模式

1. 使用-+键选择鼓组。
2. 在其它模式下，按下DRUM键，回到鼓组切换界面。

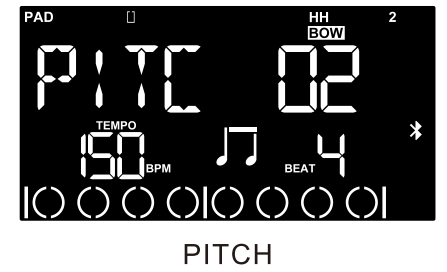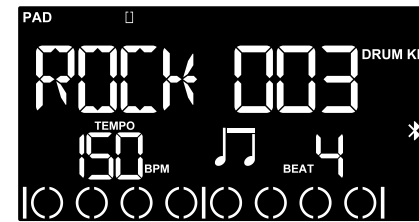


PITCH

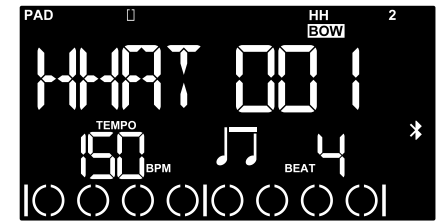


音色切换

套鼓鼓盘设置

1. 在DRUM模式下，点击MENU键进入菜单。
2. 通过-+选择VOICE 或TRIG (trigger) 调节鼓盘参数，按OK键确认，按MENU键返回主菜单。

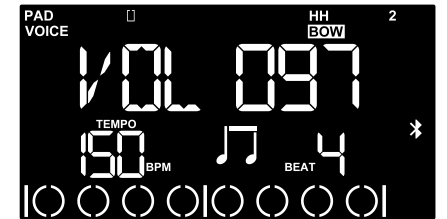

VOLUME

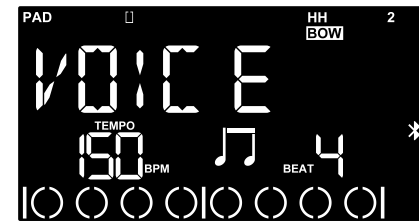

VOICE



TRIGGER


3. 通过-+键调节参数值，调节完毕可按MENU键返回，设置结果直接保存。

* TRIG (Trigger) 菜单

1. 在TRIG界面，敲击任意鼓盘选择你要调节的鼓盘。
2. 按OK键选择你所需要调整的参数。
3. 通过-+键调节参数值，调节完毕后可按MENU键返回，设置结果直接保存。


* VOICE菜单

1. 在VOICE界面，敲击任意鼓盘选择你要调节的鼓盘。
2. 按OK键选择你所需要调整的参数。

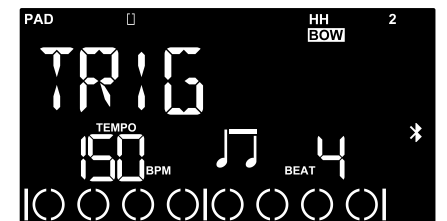


参数名称	调整范围	参数说明
SENSITIVITY	01-99	调节鼓盘灵敏度，灵敏度越高，打击垫即使轻轻敲打也会产生响亮声音。灵敏度越低，即使用力敲打也会产生小的音量。请多尝试并调节出适合自己打击习惯的灵敏度。
THRESHOLD	0-16	调节鼓盘的触发电平。
SCANTIME	02-08	调整触发信号的检测时间。
MASKTME	16-64	调整触发信号的屏蔽时间。


如右图，B波形将会发声，而A和C波形将不会发生。
注：如果您设置的数值过高时，轻轻打击将不会发声。

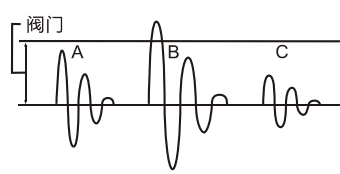


设置时，请尝试柔和的与有力度的打击，并确认音量自然的改变。
注：如果您设置的数值过高，发声的时间将拉长。请尽可能的设置为较低的数值。

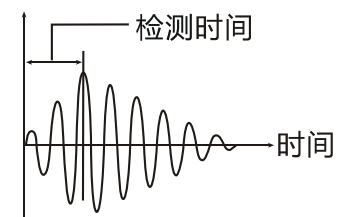

注：快速演奏时，过高的数值可能会屏蔽触发信号，故尽可能的调低数值。

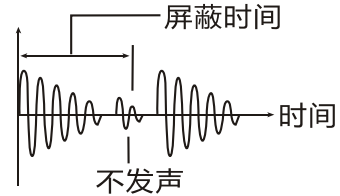

参数名称	调整范围	参数说明
XTALK CANCEL	00-80	调整交叉串扰值。 打击时，某些没被打击的鼓盘也被触发发声，提高被串扰发声的鼓盘的XTALK CANCEL。 注： 如果数值设置过高，同时打击时，可能会发生打击力度小的鼓盘不被触发。故在不发生串扰的情况下，数值尽可能的设置最小。
CURVE	00-03	
RIM GAIN	01-99	调整边击增益，只对鼓边和镲边有效。
HEAD RIM ADJUST	00-99	当您用力打击鼓边时，音色会不如您意时，您可以通过调整RIM ADJUST来改善这一问题。如果数值设置过低，您将不能进行边击演奏。


注：在调节过程中，使用最多的是SENS调节与RIMG调节，当您需要调节鼓盘鼓面灵敏度的时候，通过SENS进行调节。当您需要调节鼓边灵敏度的时候，通过RIMG调节。镲面与镲边调节同样也适用SENS与RIMG。

简写与全称对照表

简称	全称
SENS	SENSITIVITY
THRE	THRESHOLD
SCAN	SCANTIME
MASK	MASKTIME
XTLK	XTALK CANCEL
CRVE	CURVE
RIMG	RIM GAIN
RIMA	HEAD RIM ADJUST

混响功能操作


1. 按REVERB键进入混响功能界面。

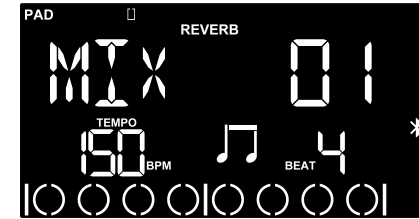



- 按+键调节混响深度
- 再次按REVERB键关闭混响

DEMO曲功能操作


- 按SONG按钮进入DEMO曲功能界面。
- 按+键选择曲目，按PLAY/STOP键播放/暂停DEMO曲，按下DRUM OFF键，可静音DEMO曲内的鼓声。

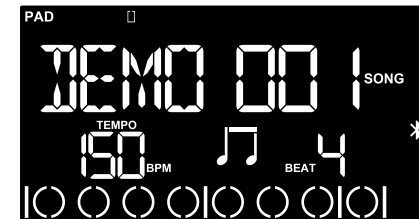

- 在SONG模式下，按下MENU键，进入SONG设置界面。
- 在SONG设置模式下，按OK键切换所需调节的内容，按+键调节所选中的参数值。

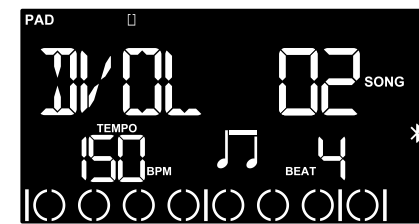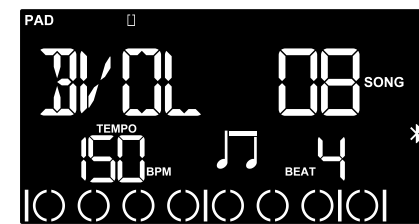


节拍器功能操作

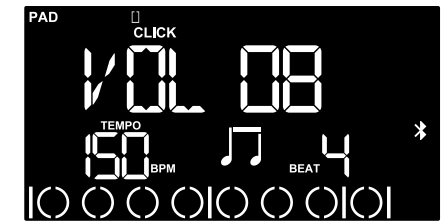

- 按CLICK键，开启节拍器功能。
- 在节拍器界面下，按OK选择你要调整的参数。
- 按+调节参数值，调节范围如下：
速度：40-280
节奏型：4分音符、8分音符、8分音符三连音、16分音符
拍数：1-9
节拍器音量：0-10
- 再次按CLICK键关闭节拍器。

录音模式操作


- 按REC键进入录音模式，即准备录音状态；在准备状态下按REC按可退出录音。

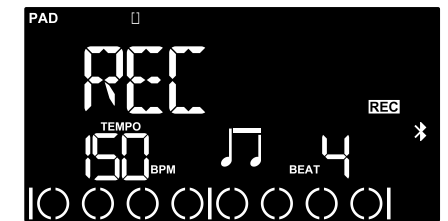


- 进入录音模式后，敲击任何部件录音开始。




- 录音过程中，按REC键或停止演奏5秒后，录音结束。

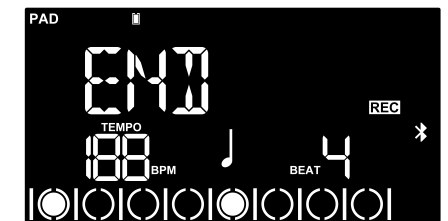

4. 在END状态下, 按PLAY键播放录音; 按REC键再次进入准备录音状态。

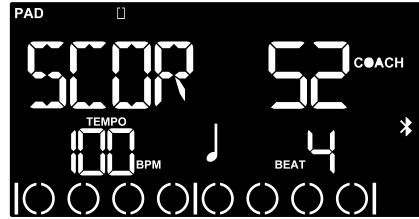

3. 在TIME 1界面中, 按MENU键进入TIME CHECK 设置, 按OK键切换需要调节的参数, 选中项闪烁, 按+键调节参数值 (SCOR=打开/关闭记分, TIME=练习时长, BPM=练习速度)。

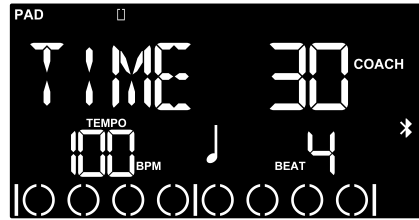



教练功能操作

按COACH键进入教练功能, 按+键切换教练功能类型, 按OK键进入相应功能界面。


TIME	TIME CHECK
C-UP	CHANGE UP
Q-CO	QUIET COUNT
S-CO	STROKE COUNT

* TIME CHECK

1. 在TIME 0界面下, 按OK键进入TIME CHECK 准备模式, 屏幕显示变成TIME 1。

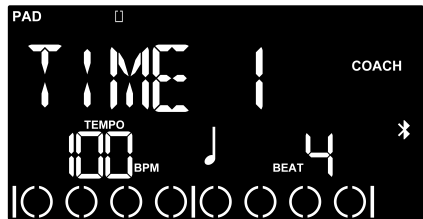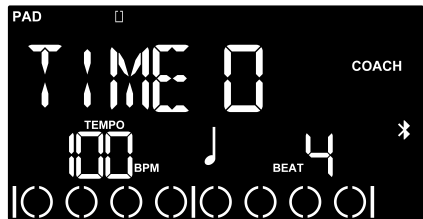


2. 在TIME 1界面下, 按CLICK键, 一小节预备拍后, 练习开始。练习过程中界面显示TIME 3。
(若在设置中选择开启记分, 则在练习结束后出现分数)

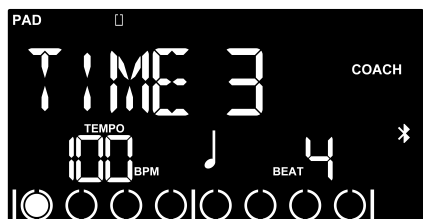

* CHANGE UP


1. 在C-UP 0模式下, 按OK键进入change up准备模式, 屏幕显示变成C-UP 1。

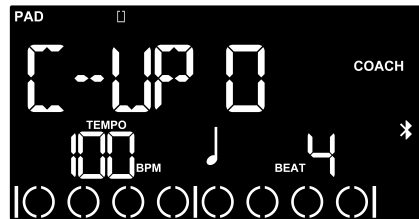

2. 在C-UP 1模式下, 按CLICK键, 一小节预备拍后练习开始。练习过程中界面显示变成C-UP 3。





3. 在C-UP 1的界面下, 按MENU键进入CHANGE UP 界面设置, 按OK键切换需要调节的参数, 选中项闪烁, 按+键调节参数值。(BAR=小节=X小节 后节奏型变化, BPM=练习速度)

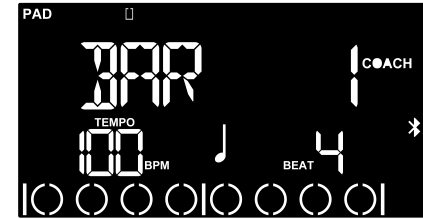

* QUIET COUNT

1. 在Q-CO 0界面下, 按OK键进入QUIET COUNT练习准备模式, 屏幕显示变为Q-CO 1。

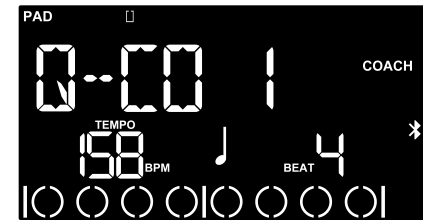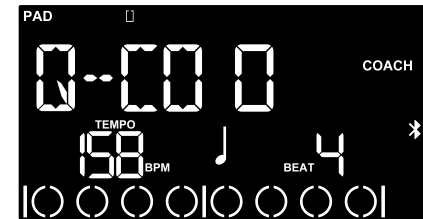

2. 在Q-CO 1模式下, 按CLICK键, 一小节预备拍后练习开始。练习过程中界面显示变成Q-CO 3。




3. 在Q-CO 1的界面下, 按MENU键进入QUIET COUNT设置, 按OK键切换需要调节的参数, 选中项闪烁, 按+键调节参数值。(BAR=小节=静音小节, BPM=练习速度)



* STROKE COUNT


1. 此模式用于计算鼓手在固定时间内可以打出多少点数。
2. 在S-CO界面下, 按OK键进入STROKE COUNT练习准备模式, 屏幕显示变为PREP 1。

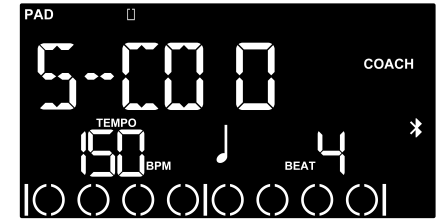

3. 在PREP 1界面下, 直接敲击鼓盘, 计数练习开始, 练习结束后, 按CLICK键回到PREP 1状态。





4. 在PREP 1界面下, 按MENU键进入STROKE COUNT设置界面, 按+键调节参数值。(TIME=计数时长)

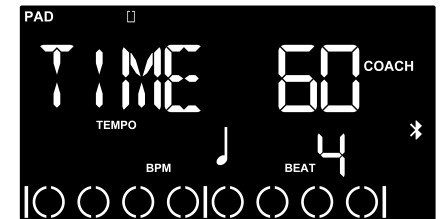


系统功能设置

* RESET (RSET)

在DRUM模式下，按MENU键进入设置界面，按+键选定RESET项，按OK键进入，进入后显示RSET ALL，再按一次OK键，直接返回主界面，恢复出厂设置完成。

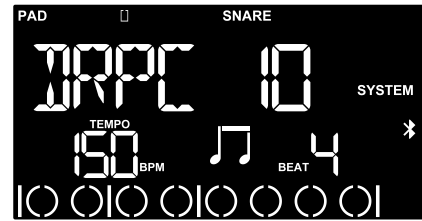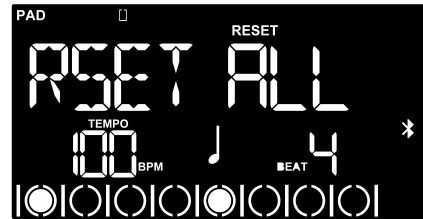

DRPC=midi输出通道

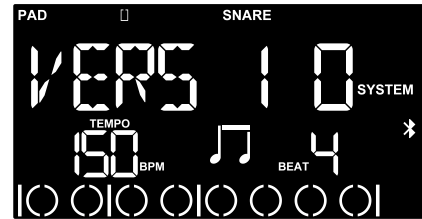

VERS=系统版本

* AUX IN 返录功能

1. 通过AUX IN接口连接手机/iPad 至DM-210主机
2. 打开手机/iPad上自带录音APP，点击手机上的录音键后开始演奏，演奏的内容将会被入至手机/iPad中。

*需要使用返录功能时，请使用三环四段式的3.5mm音频连接线。


* 蓝牙功能

使用手机连接DM-210

1. 开启手机蓝牙功能。
2. 在蓝牙设备下找到NUX DM-210，点击连接。
3. 连接成功后可以使用手机设备播放音乐。

* SYSTEM (SYST)

在DRUM模式下，按MENU键进入设置界面，按+键选定SYST项，按OK键进入SYST设置界面。在SYST界面内，按K键切换你所需要调整的参数项目，按+键调整参数值。

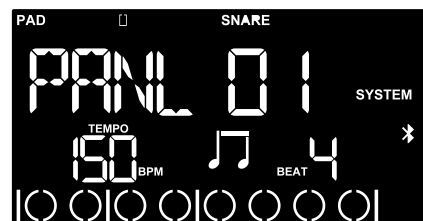

PANL=相位左



NOTE=midi值

Function	Transmitted	Recognized	Remarkd	
Basic default	10	10		
Channel changed	No	No		
Note	0-127	0-127		
Velocity:	Note on	Yes	Yes	
	Note off	No	Yes	
After Key's	No	No		
Touch Channel's	No	No		
Control change:	0	No	No	Bank select
	1	No	No	Modulation
	5	No	No	Portamento time
	7	No	No	Volume
	10	No	No	Pan
	11	No	No	Expression
	64	No	No	Sustain pedal
	65	No	No	Portamento on/off
	66	No	No	Sostenuto pedal
	67	No	No	Soft pedal
Program change	120	No	No	All sound off
	121	No	No	Reset all controllers
	123	No	No	All note off
System exclusive	No	No		

鼓组名称

01	STAD = STANDARD	09	METL = METAL
02	ORIG = ORIGINAL	10	ELEC= ELECTRIC
03	ROCK = ROCK	11	DANC=DANCE
04	STUD = STUDIO	12	TECH=TECHNO
05	FUNK = FUNK	13	PERC=PERCUSSION
06	HYBD = HYBIRD	14	SESS=SESSION
07	BLUE = BLUES	15	CHN = CHINA
08	JAZZ = JAZZ		

技术规格

显示： 负显段码液晶
鼓组： 15套预设鼓组
鼓曲： 10首鼓组
录音： 1组
CLICK： 拍数、节奏、速度、音量
MIDI功能： USB-MIDI, 自动电脑识别
效果器类型： Reverb
触发器： 3TOM (双触发)、1SNARE (双触发)、1HIHAT (双触发, 带静音)、1CRASH (双触发, 带静音)、1RIDE (双触发, 带静音)、1KICK
接口： 电源接口、OUTPUT、AUX IN、USB、CYMBAL拓展、耳机
电源： DC 9V外正内负, 工作电流200mA

*技术规格如有变更, 恕不另行通知。

有关产品中所含有害物质的说明

本资料就本公司产品中所含的特定有害物质及其安全性予以说明。
本资料适用于2007年3月1日以后本公司所制造的产品。

环保使用期限



此标志适用于在中国国内销售的电子信息产品, 表示环保使用期限的年数。所谓环保使用期限是指在制造日起的规定期限内, 产品中所含的有害物质不致引起环境污染, 不会对人身、财产造成严重的不良影响。
环保使用期限仅在遵照产品使用说明, 正确使用产品的条件下才有效。
不当的使用, 将会导致有害物质泄漏的危险。

产品中有毒有害物质或元素的名称及含量

部件名称	有害有毒物质或元素					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
外壳(壳体)	×	○	○	○	○	○
电子部件(印刷电路板等)	×	○	×	○	○	○
附件(电源线、交流适配器等)	×	○	○	○	○	○

○ : 表示该有害有毒物质在该部件所有均质材料中的含量均在SJ/T11363-2006 标准规范的限量要求以下。
× : 表示该有害有毒物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006 标准规定的限量要求。
因根据现有的技术水平, 还没有什么物质能够代替它。

质量承诺

亲爱的 **NUX** 用户, 在您使用本产品时, 请仔细阅读产品说明书, 当您有疑问和困难时, 请拨打售后服务热线:
400-990-9866

- 一周内出现质量问题可退货退款
- 一年内出现质量问题可免费维修
- 一月内出现质量问题可调换
- 终身享有咨询和维修服务

* 请向销售商索取有效购买凭证并予以保存。

换修政策

一、包换政策:

1. 消费者自购机之日起1个月之内, 在正常使用情况下, 出现非人为的产品性能故障, 且产品外观及包装保持完好的可向所购机的经销商换机。
2. 消费者在换机时应出示由经销商开出的购机收据及保修卡, 否则经销商可以不予更换。

二、保修政策:

产品在购买之日起1年内, 可免费享有维修服务; 对于超过1年的产品及人为或不可抗力因素造成损坏的产品, 我司可提供有偿维修服务。

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠️ WARNING and ⚠️ CAUTION Notices About the Symbol

⚠️ WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.	⚠️ CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.
-------------------	--	-------------------	--

ALWAYS OBSERVE THE FOLLOWING

⚠️ WARNING

- Before using this unit, make sure to read the instructions below and the Owner's Manual.
- Do not open (or modify in any way) the unit or its AC adaptor.
- Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Cherub Service Center.
- Never use or store the unit in places that are:
 - Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
 - Damp (e.g., baths, washrooms, on wet floors); or Are
 - Humid; or Are
 - Exposed to rain; or Are
 - Dusty; or Are
 - Subject to high levels of vibration.
- This unit may be installed on a stand using a Clamp.
- When installing the unit on a stand with a clamp, the stand must not be placed in an unstable location or on an incline, but in a level and stable position. Even if a stand is not used, make sure that the unit is placed in a stable location.

⚠️ WARNING

- Be sure to use only the AC adaptor supplied with the unit. Also, make sure the line voltage at the installation matches the input voltage specified on the AC adaptor's body. Other AC adaptors may use a different polarity, or be designed for a different voltage, so their use could result in damage, malfunction, or electric shock.
- Do not excessively twist or bend the power cord, nor place heavy objects on it. Doing so can damage the cord, producing severed elements and short circuits. Damaged cords are fire and shock Hazards!
- This unit, either alone or in combination with an amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level, or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should immediately stop using the unit, and consult an Audiologist.
- Do not allow any objects (e.g., flammable material, coins, pins); or liquids of any kind (water, soft drinks, etc.) to penetrate the unit.

⚠️ WARNING

- Immediately turn the power off, remove the AC adaptor from the outlet, and request servicing by your retailer, the nearest Cherub Service Center.
- The AC adaptor or the power-supply cord has been damaged; or
- If smoke or an unusual odor occurs
- Objects have fallen into, or liquid has been spilled onto the unit; or
- The unit has been exposed to rain (or otherwise has become wet); or
- The unit does not appear to operate normally or exhibits a marked change in performance.

- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit.

- Protect the unit from strong impact. (Do not drop it!)

- Do not force the unit's power-supply cord to share an outlet with an unreasonable number of other devices. Be especially careful when using extension cords—the total power used by all devices you have connected to the extension cord's outlet must never exceed the power rating (watts/amperes) for the extension cord. Excessive loads can cause the insulation on the cord to heat up and eventually melt through.

- Before using the unit in a foreign country, consult with your retailer, the nearest Cherub Service Center.

⚠️ CAUTION

- The unit and the AC adaptor should be located so their location or position does not interfere with their proper ventilation.

- Always grasp only the output plug or the body of the AC adaptor when plugging into, or unplugging from, this unit or an outlet.

- Any accumulation of dust between the AC adaptor and the power outlet can result in poor insulation and lead to fire. Periodically wipe away such dust with a dry cloth. Also, disconnect the power plug from the power outlet whenever the unit is to remain unused for an extended period of time.

- Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children.

- Never climb on top of, nor place heavy objects on the unit.

- Never handle the AC adaptor body, or its output plugs, with wet hands when plugging into, or unplugging from, an outlet or this unit.

- If you need to move the instrument, take note of the precautions listed below. Make sure to have a firm grip, to protect yourself from injury and the instrument from damage.
 - Check to make sure that the clamp that fixes the unit to the stand has not become loose. Fasten them again securely whenever you notice any loosening.
 - Disconnect the power cord.
 - Disconnect all cords coming from external devices.

- Before cleaning the unit, turn off the power and unplug the AC adaptor from the outlet.




- Whenever you suspect the possibility of lightning in your area, disconnect the AC adaptor from the outlet.

- Should you remove security screws, make sure to put them in a safe place out of children's reach, so there is no chance of them being swallowed accidentally.





CNTENTS

Assembly diagram	04
Finish	07
Module control panel	08
Connect external devices	09
Screen display	10
Ready to play	11
Function operation	14
Switch drum kit	14
Drum pad setup	14
Effect	16
Demo song	16
Click	16
Recording	16
Coach	17
System	19
MIDI Implementation chart	20
Drum kit name	20
Specifications	21

ASSEMBLY DIAGRAM

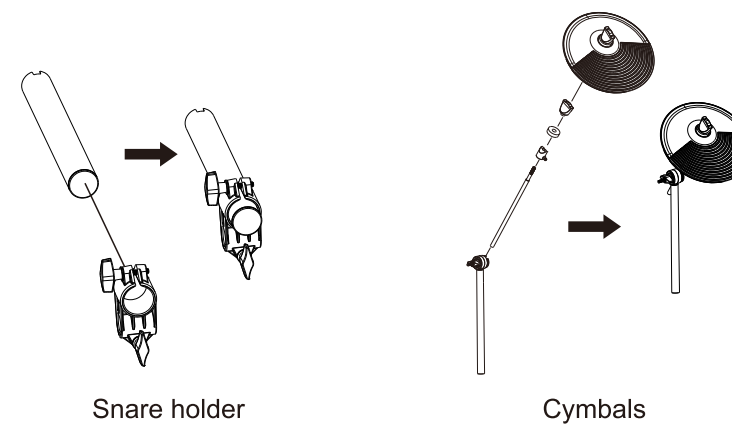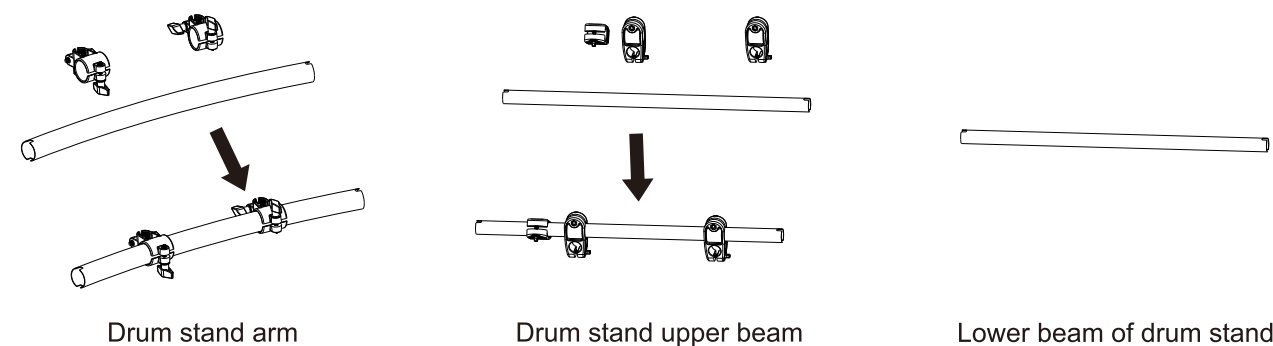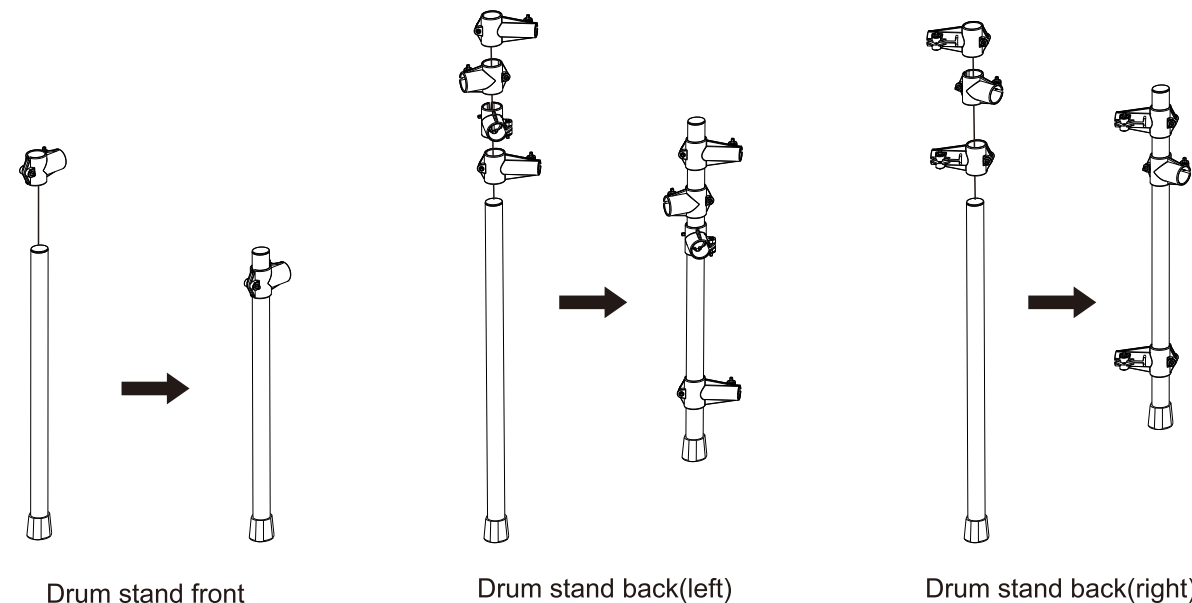


ASSEMBLY DIAGRAM

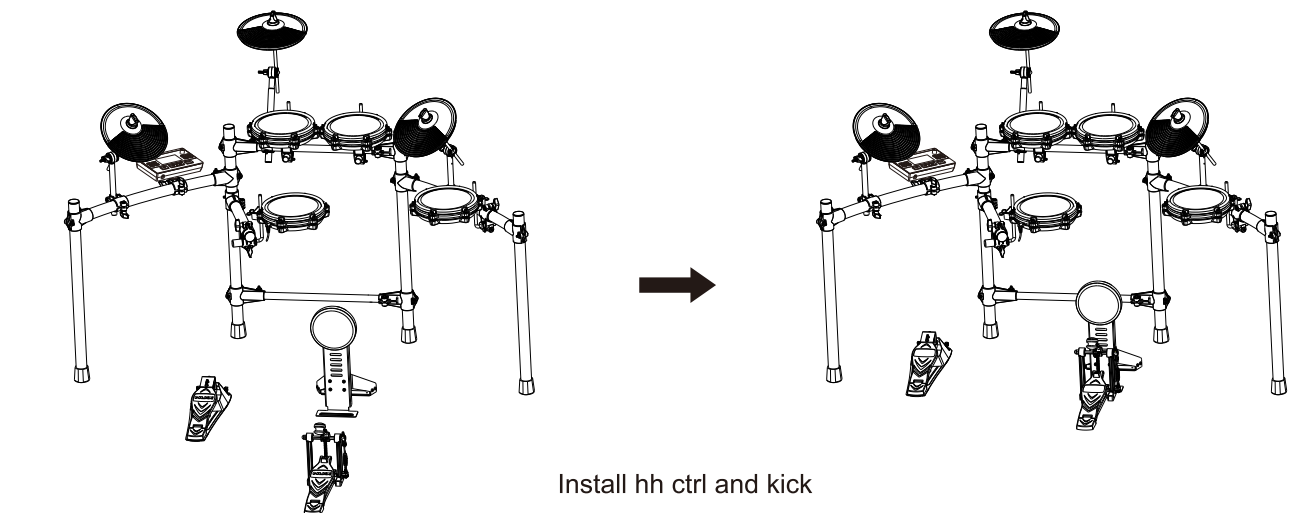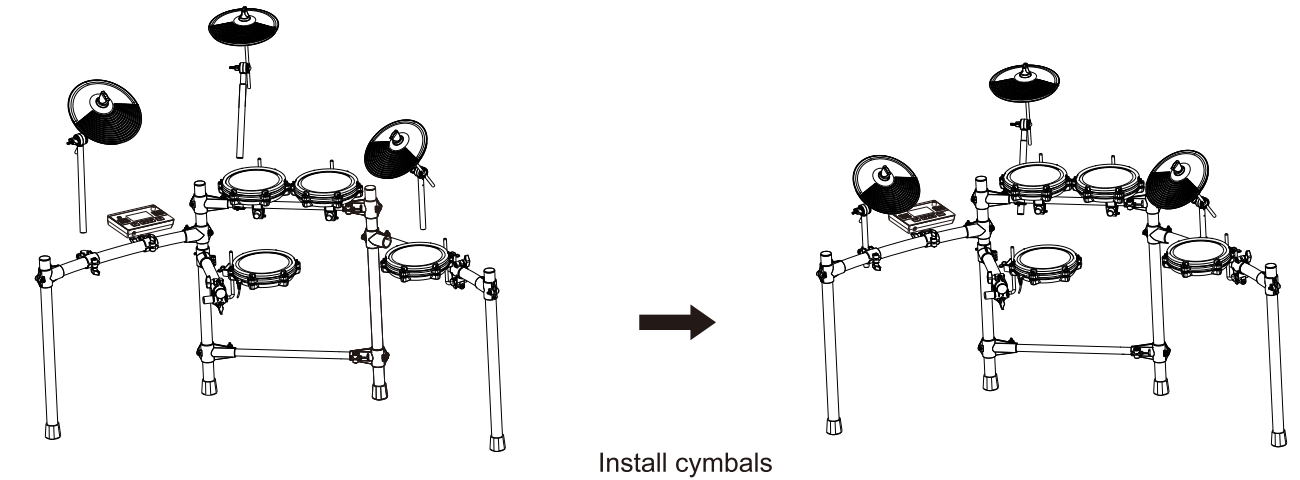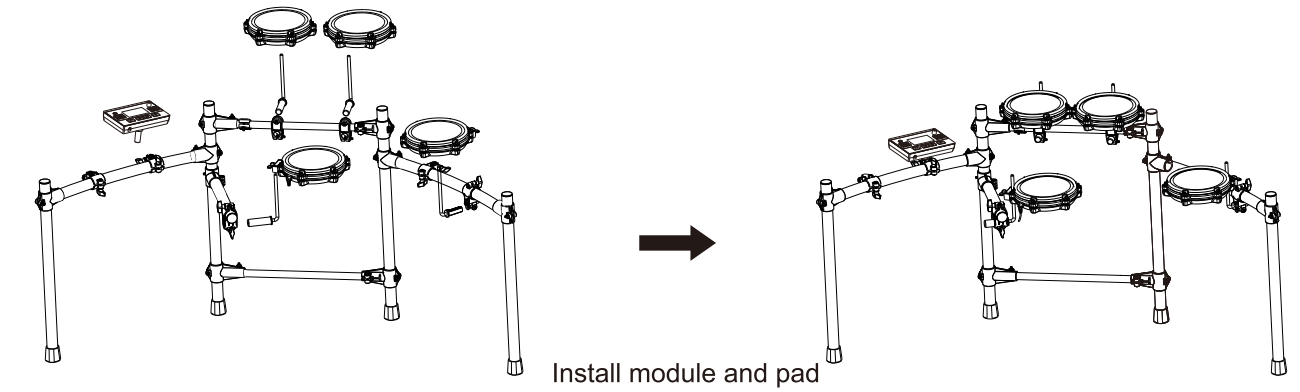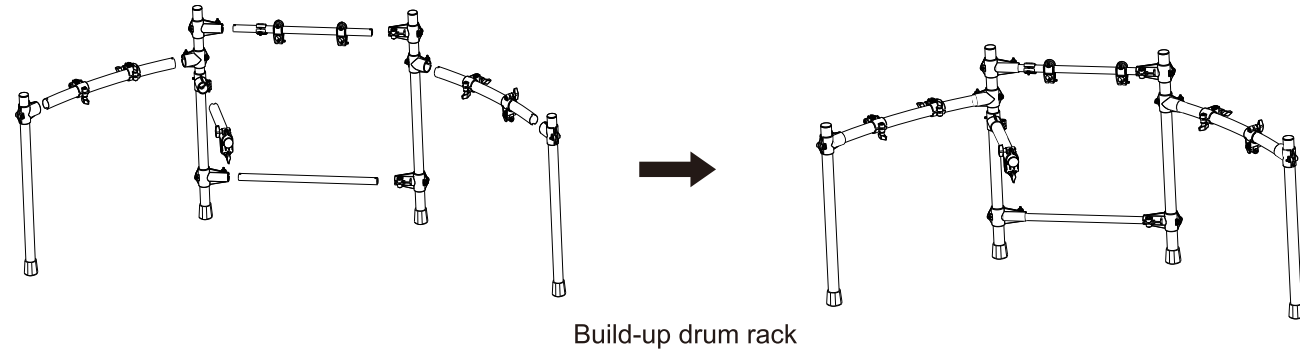


ASSEMBLY DIAGRAM

Cable connection


1. Connect the cable to the module.

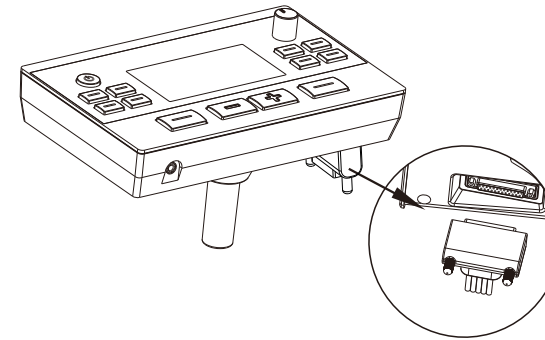


2. The label on the cable indicates the drum pad to be connected.

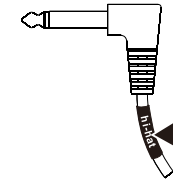


Connect the drum pad:

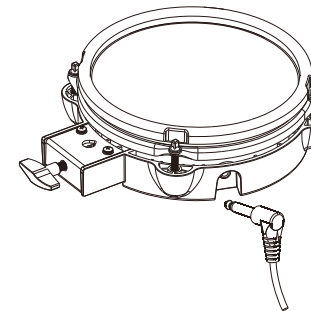


Connect the cymbal pad:

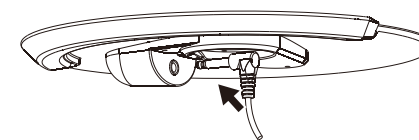


3. Connect the hh ctrl and kick.

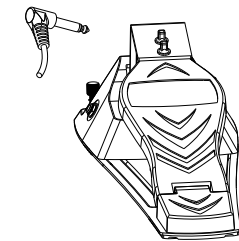

In order to prevent equipment damage, please shut down during the connection process.

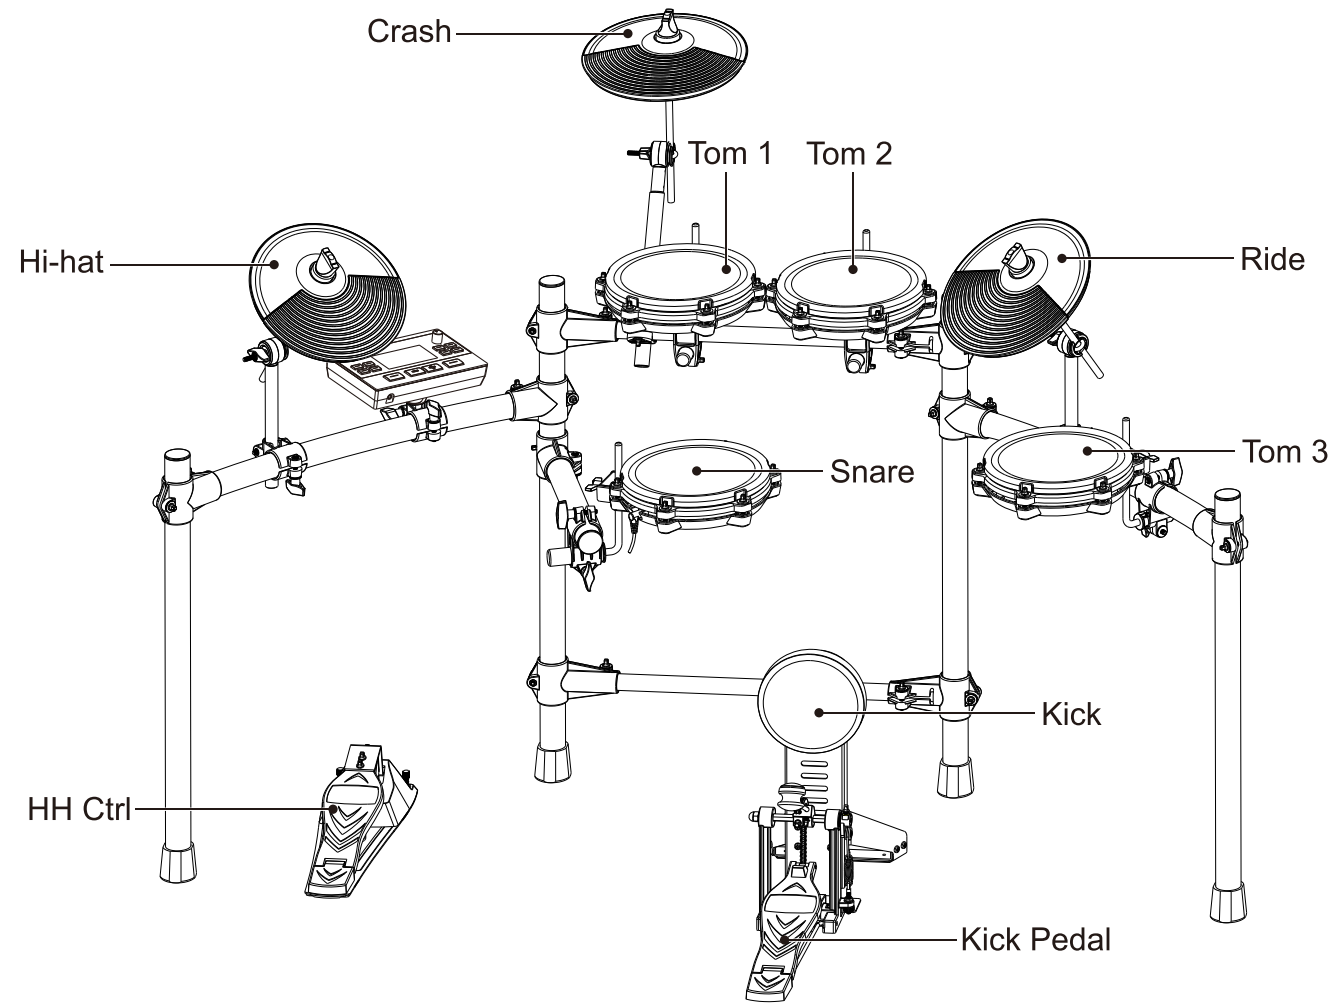


- | | |
|-------------------------|--|
| 1. Screen display | 9. Volume adjustment |
| 2. Power on/off | 10. Recording |
| 3. Click on/off | 11. Play/stop |
| 4. Drum kit mode | 12. Mute the drum sound into demo song |
| 5. Reverb on/off | 13. Demo song |
| 6. Coach on/off | 14. Parameter adjustment |
| 7. Parameter adjustment | 15. OK |
| 8. Menu | 16. Phone |

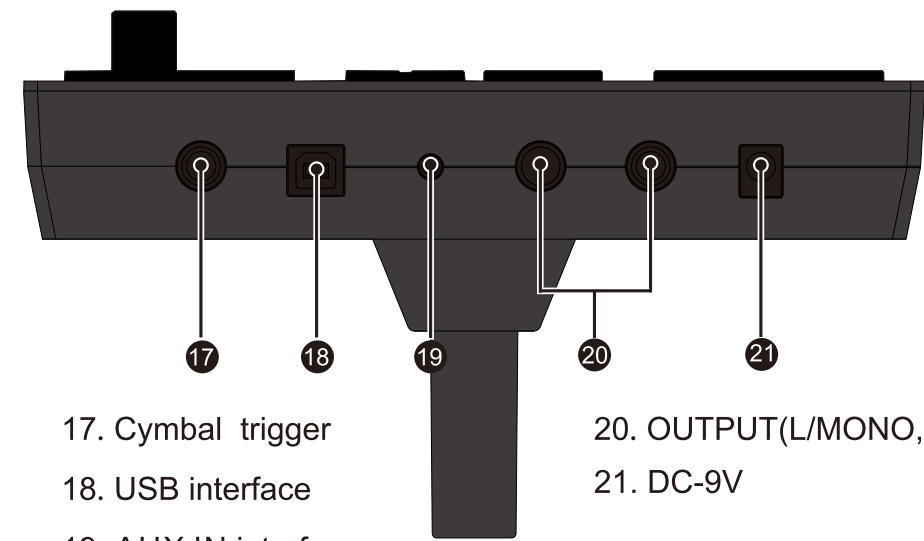

- | | |
|----------------------|-----------------------|
| 17. Cymbal trigger | 20. OUTPUT(L/MONO, R) |
| 18. USB interface | 21. DC-9V |
| 19. AUX IN interface | |


CONNECT EXTERNAL DEVICES

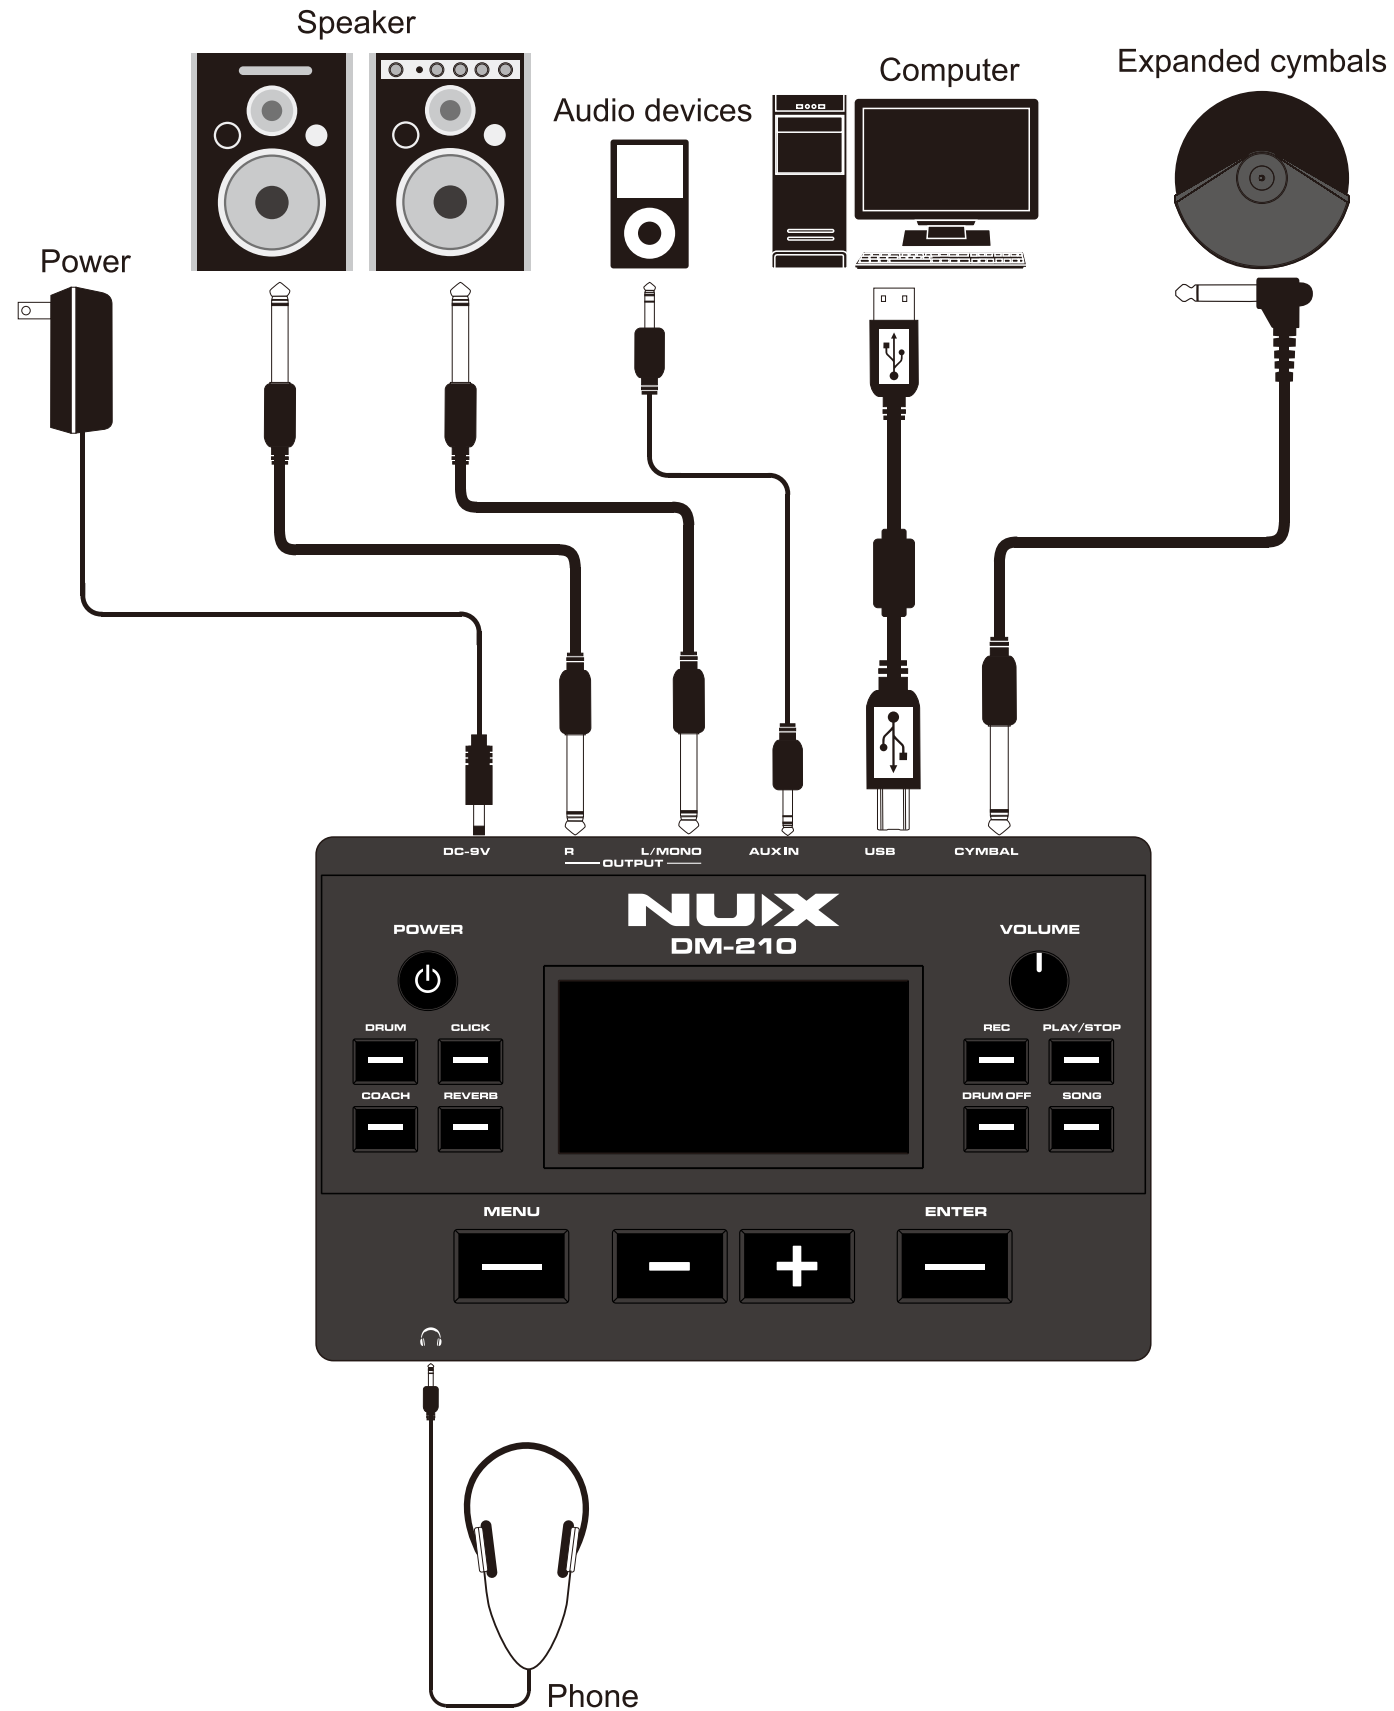

WARNING:

In order to prevent equipment damage, please shut down during the connection process.

MODULE CONTROL PANEL

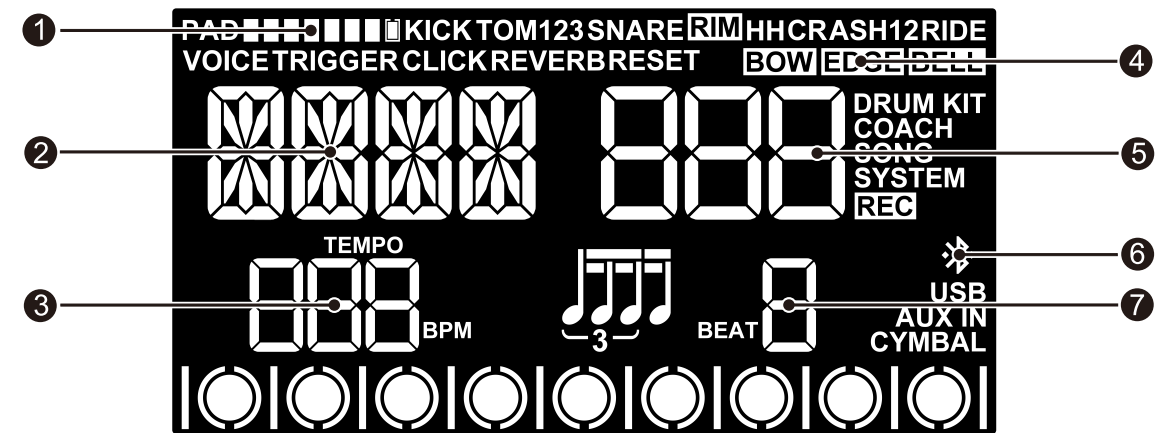

1. Power display

2. Parameter name display

3. Tempo

4. Part display

5. Parameter display

6. Blue-tooth

7. Beat


READY TO PLAY

*Turn on power

1. Adjust the volume to lowest.
2. Adjust the amp volume to lowest.
3. Turn the power.



When the power is turned on, a weak sound may be heard, which is normal.

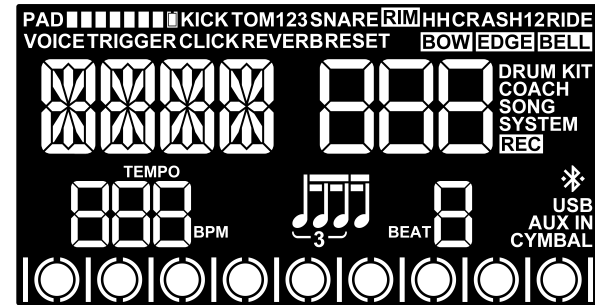

4. Hit the pad and adjust the volume as you need.

* Turn off power


1. Adjust the amp volume to lowest.
2. Turn off the amp.
3. Turn the power of DM-210.




READY TO PLAY

*Snare

Head shot
Hit the head.

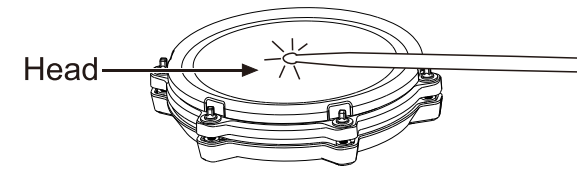


Cross stick

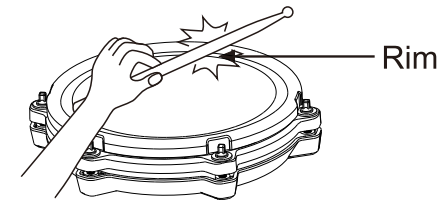


* Tom

Head shot
Hit the head.

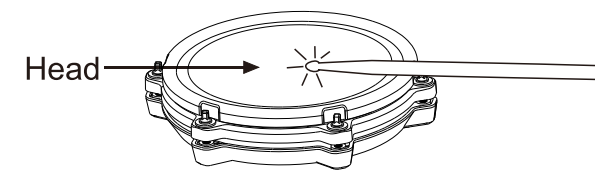


Rim click
Hit the rim.

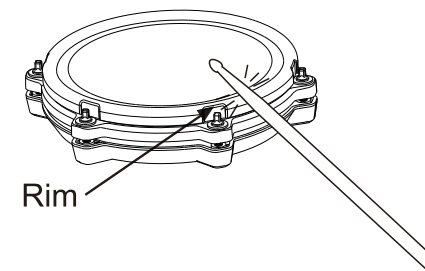


* Kick

Strike down the kick pedal.

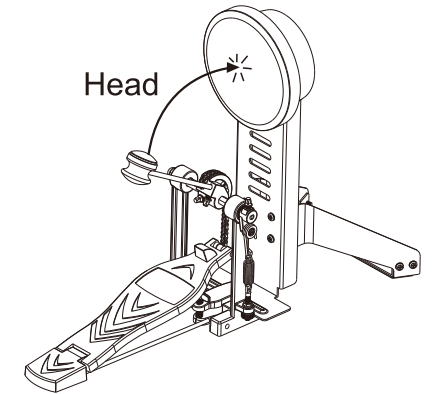


*Crash Ride

Bow shot
Hit the bow.

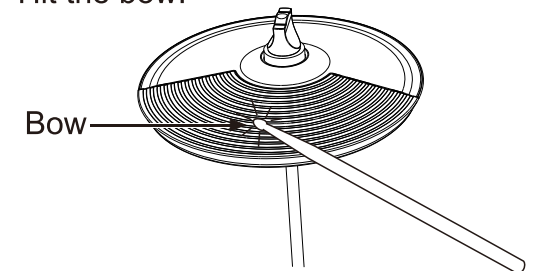


Edge shot
Hit the edge.

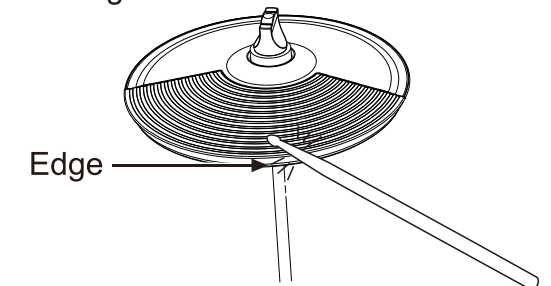

Choke

Choke the cymbal's edge with the hand immediately after hitting the cymbal will mute the sound. The choke function only works when you grasp in the area.

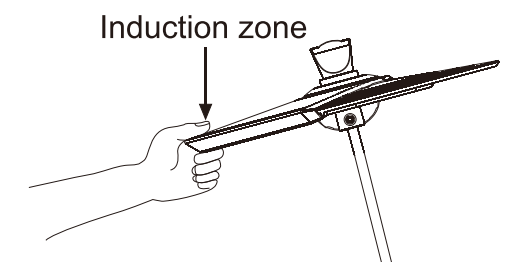


READY TO PLAY

*Hi-hat

The hi-hat sound will change smoothly between open and closed depending on pressure applied to the hi-hat control pedal.


Bow shot

Hit the bow.

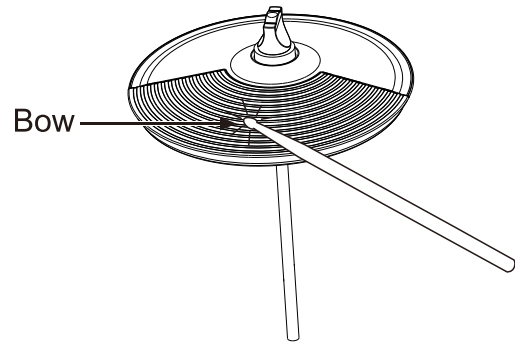


Choke

Choke the cymbal's edge with the hand immediately after hitting the cymbal will mute the sound. The choke function only works when you grasp in the area.

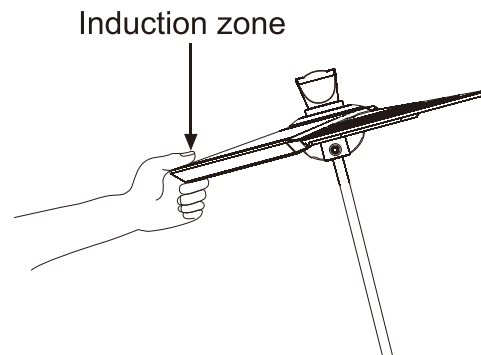

*HH Ctrl

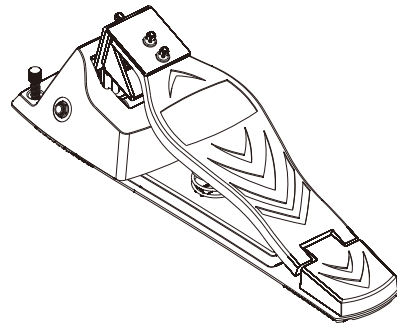

Open hi-hat

Hit the hi-hat without pressing the pedal.

Close hi-hat

Hit the hi-hat with the pedal pressed.

FUNCTION OPERATION

Switch the drum kit


* Boot into Drum Kit

1. Use the - + button to switch the drum kit.
2. Press the drum button to enter the drum kit mode in any mode.




Drum pad setup

1. Press the MENU button to enter menu function in drum kit mode.
2. Use the - + button to select voice or TRIG (trigger) to adjust the drum pad parameters, press the ok button to confirm, and press the MENU button to return to the main menu.

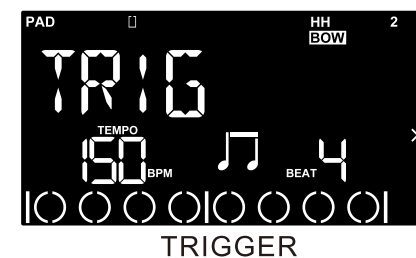

*Voice

1. In VOICE function, hit any drum pad to choose the pad you need to adjust.
2. Use the OK button to select the parameter you want to adjust.

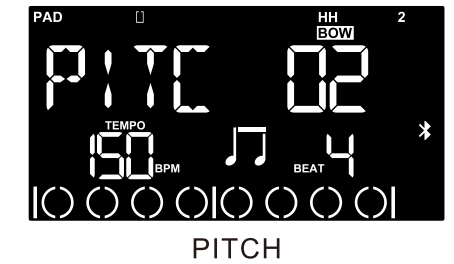

3. Adjust the parameters through the -+ keys, press the MENU key to return after adjustment, the parameters are automatically saved.

*Trig

1. In the TRIG interface, hit any pad to select the pad you want to adjust.
2. Use the OK button to select the parameter you want to adjust.
3. Adjust the parameters through the -+ keys, press the MENU key to return after adjustment, the parameters are automatically saved.




FUNCTION OPERATION

Parameter	Adjustment range	Parameter description
SENSITIVITY	01-99	Adjust the drum sensitivity, the higher the sensitivity, the louder sound will be produced even if the pad is tapped lightly. The lower the sensitivity, the smaller the volume will be produced even if you tap hard. Try and adjust the sensitivity that suits your combat habits.

THRESHOLD	0-16	Adjust the trigger level of the drum.
-----------	------	---------------------------------------


As shown on the right, the B waveform will sound and the A and C waveforms will not occur.

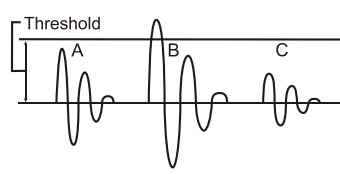

Note: If the value you set is too high, a light blow will not sound.

SCANTIME	02-08	Adjust the detection time of the trigger signal.
----------	-------	--


When setting, try a soft and powerful blow and confirm the natural change in volume.

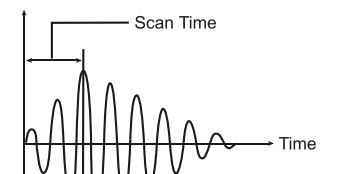

Note: If the value you set is too high, the sounding time will be lengthened. Please set as low as possible.

MASKTME	16-64	Adjust the masking time of the trigger signal.
---------	-------	--


Note: When playing fast, too high values may mask the trigger signal, so lower the value as much as possible.

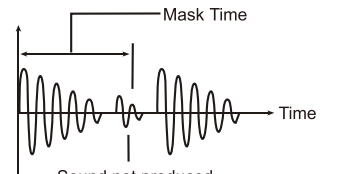

Parameter	Adjustment range	Parameter description
XTALK CANCEL	00-80	Adjust the crosstalk value.

When hit, some drums that are not hit are also triggered to sound, improving the XTALK CANCEL of the drum that is being audible.

Note: If the value is set too high and the strike is at the same time, the drum with a small striking force may not be triggered. Therefore, the value is set as small as possible without crosstalk.

CURVE	00-03	
-------	-------	---

RIM GAIN	01-99	Adjust the edge hit gain to be effective only for the drum rim and the cymbals edge.
----------	-------	--

HEAD RIM ADJUST	00-99	When you hit the rim or the side, the tone will be worse than you want, you can improve this by adjusting RIM ADJUST. If the value is set too low, you will not be able to play it.
-----------------	-------	---

In the adjustment process, SENS adjustment and RIMG adjustment are used the most. When you need to adjust the sensitivity of the drum head, you can adjust it through SENS. When you need to adjust the rim sensitivity, adjust it through RIMG. Cymbal bow and edge adjustment are also applicable to SENS and RIMG


Abbreviation and full name comparison table

ABBREVIATION	FULL NAME
SENS	SENSITIVITY
THRE	THRESHOLD
SCAN	SCANTIME
MASK	MASKTIME
XTLK	XTALK CANCEL
CRVE	CURVE
RIMG	RIM GAIN
RIMA	HEAD RIM ADJUST

FUNCTION OPERATION

Reverb function


1. Press REVERB to enter the reverb function interface.

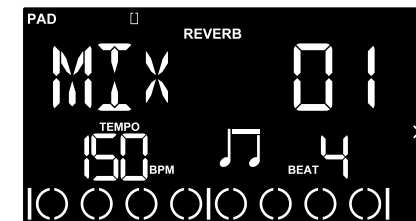

2. Use -+ button to adjust the mix.
3. Press the REVERB button again to turn off the reverb.

DEMO Song


1. Press the SONG button to enter the DEMO song function interface.
2. Press -+ key to select a track, press PLAY/STOP keyboard to play or pause the music. Press the DRUM OFF button to mute the demo song drum sound.

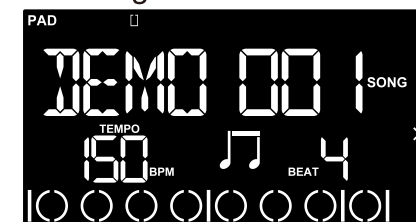

3. In SONG mode, press the MENU button to enter the SONG setting interface.
4. In the SONG setting interface, press OK to switch the parameter you want to adjust, and press -+ to adjust the parameter value.




Metronome

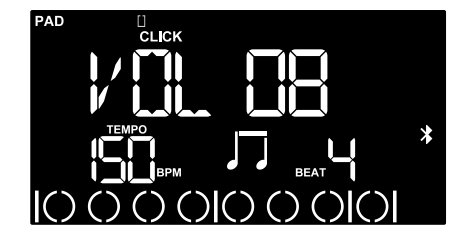


1. Press the CLICK button to enter the metronome function and turn on the metronome also.
2. In metronome interface, press OK switch button to switch the parameter you want to adjust.
3. Use -+ button to adjust the parameter value. The parameter value range as below.
TEMPO:40-280bpm
Rhythm: Quarter note, Eighth note, Triplet, 16th note
Beat:1-9
Volume:1-9
4. Press the CLICK to turn off the metronome.

Recording

1. Press the REC button to enter the recording mode, that is ready to record. Press REC in the ready state to exit the recording.

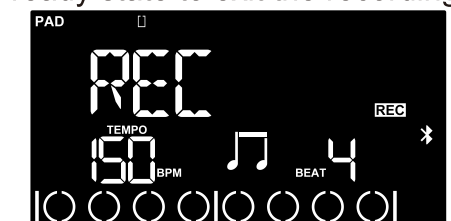


2. In the ready state, hit any drum to start recording.

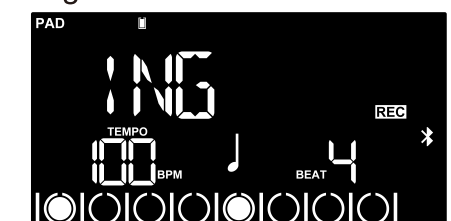


3. During the recording process, press the REC button or stop playing for five seconds, the recording ends.

FUNCTION OPERATION

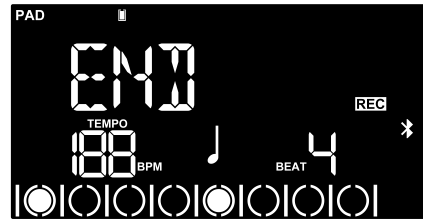

4. In the END state, press the PLAY button to play the recording, and press the REC button to enter the state of preparing for recording again.

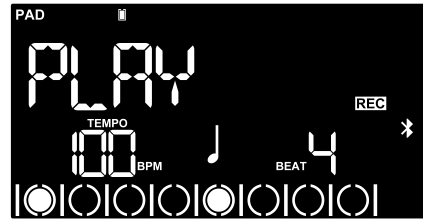



Coach

Press the COACH key to enter the coach function, press -+ keys to switch the type, press the OK key to enter.

TIME	TIME CHECK
C-UP	CHANGE UP
Q-CO	QUIET COUNT
S-CO	STROKE COUNT



*TIME CHECK

1. In the TIME 0 interface, press OK to enter the TIME CHECK preparation mode, the screen display changes to TIME 1.

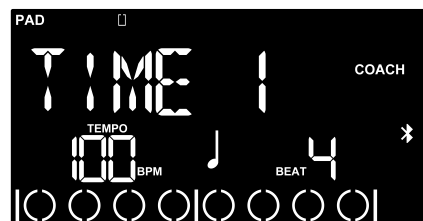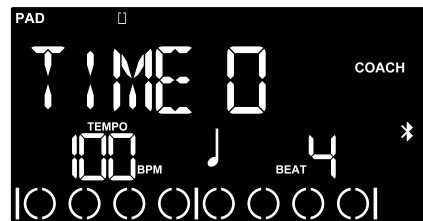


2. In the TIME 1 interface, press the CLICK button, and the practice will begin after one measure of preparation. During the exercise,

the interface display changes to TIME 3. (If scoring is turned on in the settings, the score will appear after the practice is over).

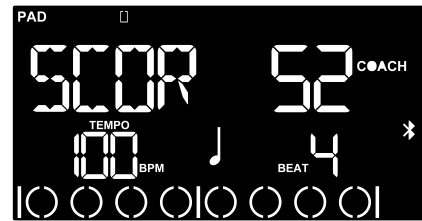
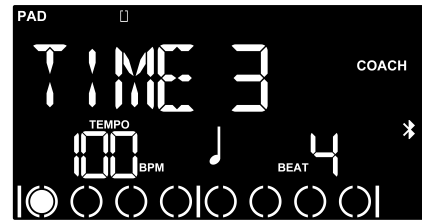


3. In the TIME 1 interface, click MENU to enter the time check setting, and use the ok key to switch the parameters to be adjusted. The selected item flashes, use -+ to adjust the parameter value (SCOR=open/close scoring, TIME=practice time, BPM=practice speed).

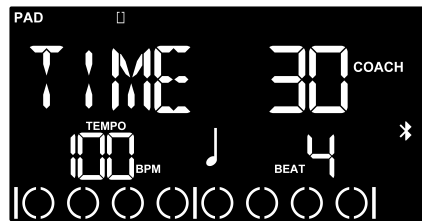


*CHANGE UP

1. In C-UP 0 mode, click ok to enter the change up preparation mode, the screen display changes to C-UP 1.

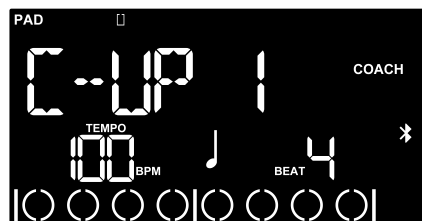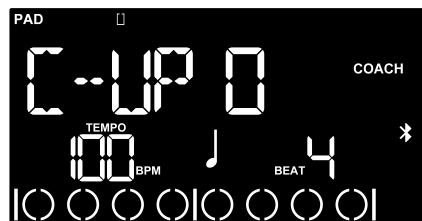


FUNCTION OPERATION

2. In C-UP 1 mode, click CLICK, after one measure of pre-beat, the practice starts. Interface display during practice becomes C-UP 3.

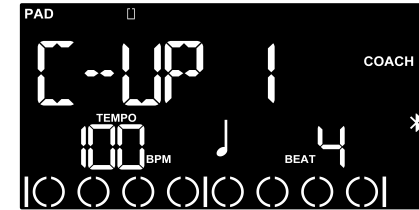


3. In the C-UP 1 interface, press MENU to enter the CHANGE UP setting, use the ok key to switch the parameter to be adjusted, the selected item flashes, and use -+ to adjust the parameter value. (BAR=Bar=Rhythm change after X bar, BPM=Practicing speed)

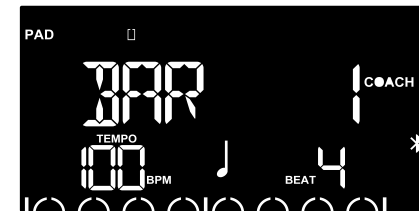

*QUIET COUNT


1. In the Q-CO 0 interface, click OK to enter the quiet count practice preparation mode, the screen display changes to Q-CO 1.

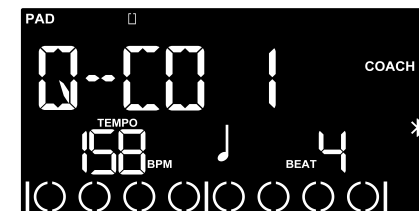

2. In Q-CO 1 mode, click CLICK, after one measure of pre-beat, the practice starts. Interface display during practice become Q-CO 3.




3. In the interface of Q-CO 1, press MENU to enter the QUIET COUNT setting, use the ok key to switch the parameter to be adjusted, the selected item flashes, and use -+ to adjust the parameter value. (BAR=bar=silent bar, BPM=practice speed)

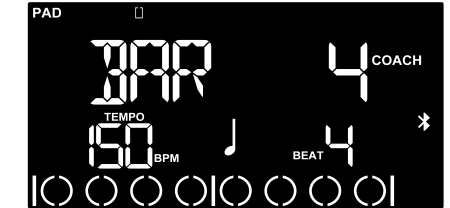

*STROKE COUNT


1. This mode is used to calculate the drummer's speed in a fixed time.
2. In S-CO mode, press OK to enter the STROKE COUNT practice preparation mode, the screen display changes to PREP 1.

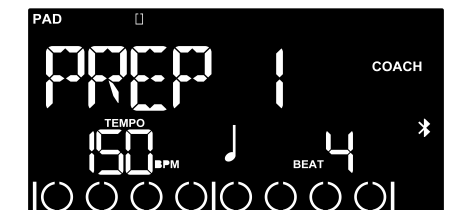

3. In the PREP 1 interface, hit the drums directly, the counting practice starts, after the practice is over, press CLICK to return to PREP 1 state.



4. In the PREP 1 interface, click MENU to enter the stroke count setting interface, and adjust the parameter value through -+ to run the system (TIME=counting duration).

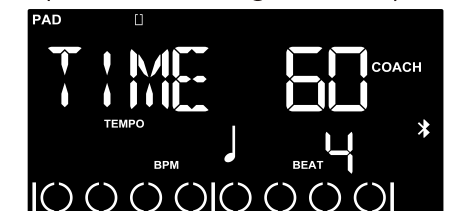

FUNCTION OPERATION

System settings

* RESET(RSET)

1. In DRUM mode, press MENU to enter the setting. Press -+ key to select RESET, press OK key to enter, after entering, it will display RSET ALL, press OK key again, the screen will directly return to the main interface, and the factory reset is complete.




* SYSTEM(SYST)


2. In DRUM mode, press MENU to enter the setting. Press -+ key to select SYST, press OK key to enter. In the SYST interface, press OK to switch the parameter you need to adjust, and press -+ to adjust the parameter value.




PANL= PAN LEFT

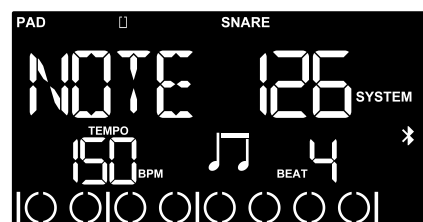

NOTE= MIDI NOTE

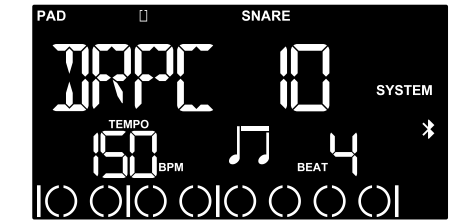

DRPC= MIDI OUTPUT CHANNEL

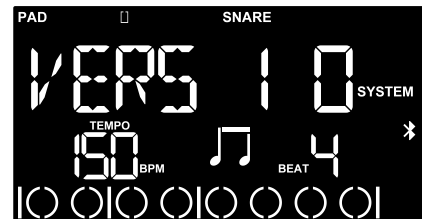

VERS= VERSION

* AUX IN Recording

1. Connect the mobile phone/ipad to the DM-210 host through the AUX IN interface.
2. Open the recording APP on the mobile phone/Ipad, click the recording button on the mobile phone and start playing, the content of the performance will be recorded into the mobile phone/ipad.

*When you need to use this function, please use 1/8" TRRS cable.

*BLUETOOTH

Connect DM-210 with Bluetooth

1. Turn on the phone's Bluetooth.
2. Find NUX DM-210 under Bluetooth device and connect.
3. After the connection is successful, you can use your phone to play music on DM-210.

MIDI EXECUTION LIST

Function	Transmitted	Recognized	Remarkd	
Basic default	10	10		
Channel changed	No	No		
Note	0-127	0-127		
Velocity:	Note on	Yes	Yes	
	Note off	No	Yes	
After Key's	No	No		
Touch Channel's	No	No		
Control change:	0	No	No	Bank select
	1	No	No	Modulation
	5	No	No	Portamento time
	7	No	No	Volume
	10	No	No	Pan
	11	No	No	Expression
	64	No	No	Sustain pedal
	65	No	No	Portamento on/off
	66	No	No	Sostenuto pedal
	67	No	No	Soft pedal
	120	No	No	All sound off
121	No	No	Reset all controllers	
123	No	No	All note off	
Program change	No	No		
System exclusive	No	No		

DRUM KIT'S NAME

01	STAD = STANDARD	09	METL = METAL
02	ORIG = ORIGINAL	10	ELEC= ELECTRIC
03	ROCK = ROCK	11	DANC=DANCE
04	STUD = STUDIO	12	TECH=TECHNO
05	FUNK = FUNK	13	PERC=PERCUSSION
06	HYBD = HYBIRD	14	SESS=SESSION
07	BLUE = BLUES	15	CHN = CHINA
08	JAZZ = JAZZ		

SPECIFICATION

Display:	Negative display segment code LCD
Drum set:	15 presets
DEMO song:	10
Recording:	1
CLICK:	speed, rhythm, beat, volume
MIDI:	USB MIDI, automatic computer recognition
Effects:	Reverb
Trigger:	3TOM, 1SNARE, 1HIHAT, 1CRASH, 1RIDE, 1KICK
Interface:	POWER, OUTPUT, AUX IN, USB, CYMBAL TRIGGER, PHONE
Power:	DC 9V external positive and internal negative, working current 200mA

*Technical specifications are subject to change without notice.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

© Cherub Technology Co., Ltd.

All Rights Reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Cherub Technology Co., Ltd.



Made in China