


SoundSation Cream 30R

30W Guitar Amp

Thank you for purchasing **SoundSation Cream 30R** Guitar Amplifier.
To get the best performance from your new amplifier, please read this instruction manual carefully.

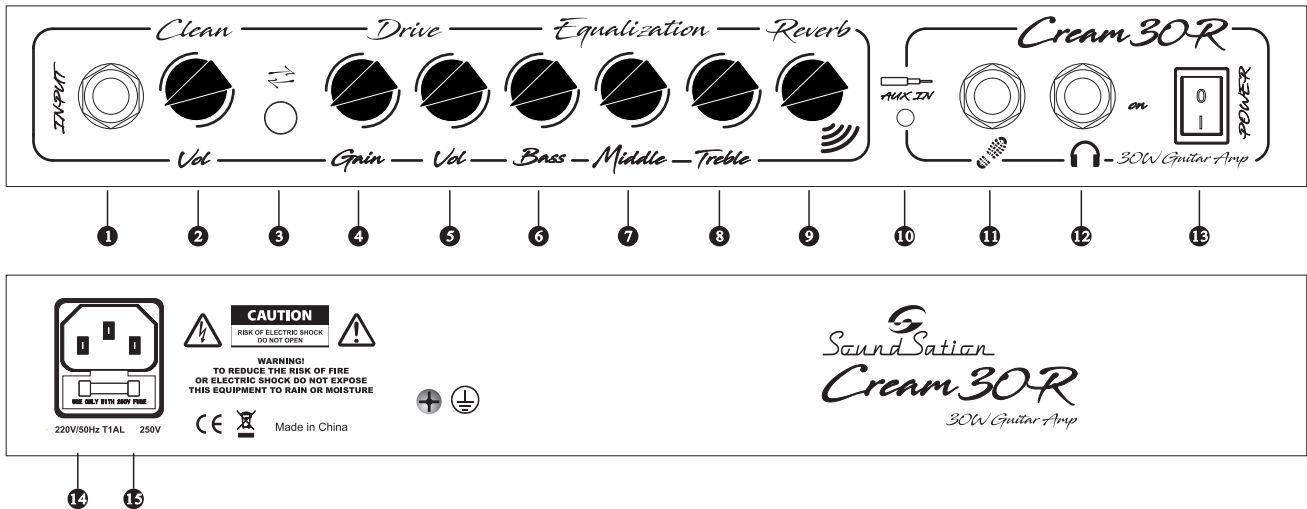

- | | |
|----------------------------|---|
| 1. INPUT | Plug your guitar here |
| 2. VOLUME | Use this control to adjust the output level of clean |
| 3. PUSH/PUSH SWITCH | Selects Clean/Drive channel |
| 4. GAIN | Adjusts the level of the Drive channel in conjunction with the Volume control |
| 5. VOLUME | Adjusts the level of the Drive channel in conjunction with the Gain control |
| 6. BASS | Controls the low frequencies range |
| 7. MIDDLE | Controls the middle frequencies range |
| 8. TREBLE | Controls the high frequencies range |
| 9. REVERB | Adjusts the reverb level for both channels |
| 10. AUX IN | Auxiliary input 3.5" jack (not affected by amp settings) |
| 11. FOOTSWITCH | By connecting this jack it is possible to remotely switch reverb ON/OFF |
| 12. HEADPHONES | Headphones stereo output jack. This jack can also be used as an unbalance line output |
| 13. POWER SWITCH | Turns the unit ON and OFF |
| 14. FUSE | See rear panel for correct value |
| 15. AC INPUT | Connect the power cord in accordance with the voltage |

IMPORTANT

To avoid risk of electrical shock do not expose to water or damp.

Always connect your instrument cable to your guitar before connecting to your amplifier. Connecting to your amplifier first may cause damage to the speaker.

Do not leave your guitar unattended with the volume turned up.

Neon or fluorescent lighting near the amplifier may cause slight hum or noise. This can frequently be eliminated by changing the position of your instrument or the amplifier and using cables with good shielding.

To avoid injuring your ears or damaging your headphones, reduce amplifier volume before plugging in your headphones.

Plugging in headphones will turn off your amplifier speaker.

Always unplug amp from mains before replacing the fuse.

WARRANTY AND SERVICE

All SOUNDSATION products feature a limited two-year warranty. This two-year warranty is specific to the date of purchase as shown on your purchase receipt.

The following cases/components are not covered from the above warranty:

- Any accessories supplied with the product
- Improper use
- Fault due to wear and tear
- Any modification of the product effected by the user or a third party

SOUNDSATION shall satisfy the warranty obligations by remedying any material or manufacturing faults free of charge at SOUNDSATION's discretion either by repair or by exchanging individual parts or the entire appliance. Any defective parts removed from a product during the course of a warranty claim shall become the property of SOUNDSATION.

While under warranty period, defective products may be returned to your local SOUNDSATION dealer together with original proof of purchase. To avoid any damages in transit, please use the original packaging if available. Alternatively you can send the product to SOUNDSATION SERVICE CENTER – Via Enzo Ferrari, 10 – 62017 Porto Recanati - Italy . In order to send a product to service center you need an RMA number. Shipping charges have to be covered by the owner of the product.

For further information please visit www.soundsationmusic.com

WARNING

PLEASE READ CAREFULLY – EU and EEA (Norway, Iceland and Liechtenstein) only

This symbol indicates that this product is not to be disposed of with your household waste, according to the WEEE Directive (2202/96/EC) and your national law.

This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (WEEE) .

Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time , your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources.

For more information about where you can drop off your waste equipment for recycling , please contact your local city office , waste authority , approved WEEE scheme or your household waste disposal service.



This product is imported in EU by FRENEXPORT SPA - Via Enzo Ferrari, 10 - 62017 Porto Recanati - Italy
SOUNDSATION is a registered trademark of FRENEXPORT SPA - Via Enzo Ferrari, 10 - 62017 Porto Recanati - Italy