


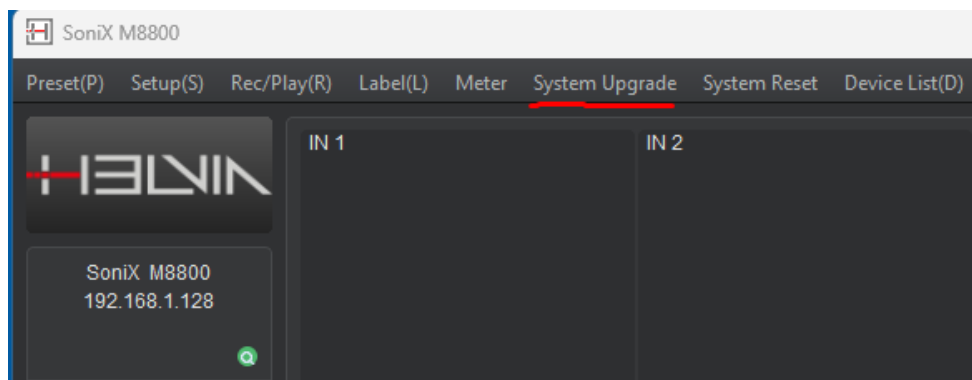 
SONIX MWP UI UPGRADE

This software upgrade adds output channel settings to SoniX MWP wall panels (Output Level adjustment buttons, Output Mute buttons, Output Level labels).

 
 **NOTE:** Before proceeding with wall panel upgrade, it is required to upgrade the SoniX M8800 firmware first.

1. PROCESSOR FIRMWARE UPGRADE PROCEDURE

1. After having connected, switched on and logged in (default password is "admin") the SoniX M8800, open "System Upgrade" menu.




2. You will then be requested to select the firmware. You can find it in the image subdirectory of the SoniX M8800 software directory (currently V1.19A). File name is "SoniX M8800_app_V1.0.35-d22.21.img".

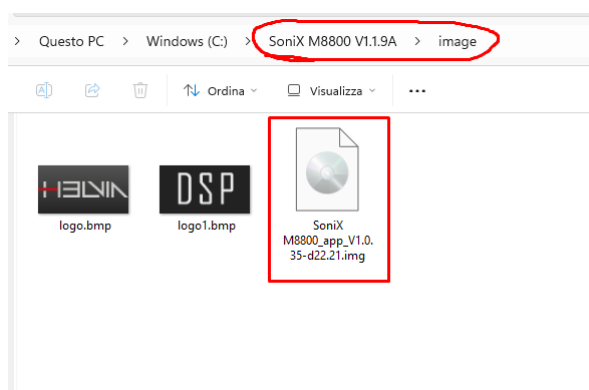


3. Open the file and wait for the upgrade to be completed (it takes few seconds).

2. WALL PANEL UI UPGRADE PROCEDURE

1. Extract the compressed file to the root directory of the Micro-SD card.

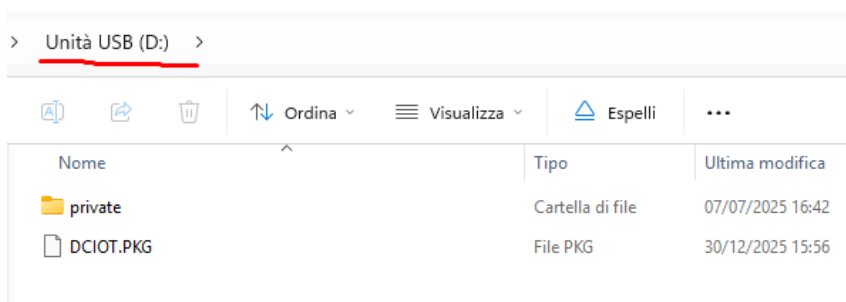

2. Insert the SD card into the wall panel SD card slot (pay attention to the orientation).

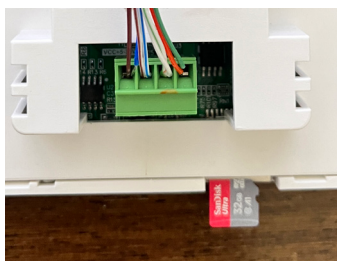

3. Power on the wall panel; it will automatically enter the update mode.
4. Wait for the upgrade to complete (you will see a series of commands on wall panel screen; last string must be **"INFO:Upgrade finished"**).
5. Remove the Micro-SD card from the slot.
6. Restart the wall panel (Power off -> Wait a few seconds -> Power on). New home page now has five buttons.

NOTE: If you want to customize the labels of the outputs as well as the inputs, you need to make this change by connecting the matrix to the PC software and accessing the Label function.



NOTE: If you want to customize the labels of the outputs as well as the inputs, you need to make this change by connecting the matrix to the PC software and accessing the Label function.

