

Takstar X3HH UHF Microphone Channel Change Operation

In the case of having both of your handheld microphones in your set configured as CHA or CHB, you can readjust the channel as follows:

1. Turn off the microphone.
2. Press and hold the CH button and turn the microphone on.
3. You can now see that CHA changed to CHB (or CHB to CHA).